

Smart M-Air

Operation Manual

Table of contents

1. Application Features	4
2. Manipulation modes	6
Remote operation mode	6
Home restricted mode	6
Demo mode	6
3. Preparation for Use	7
Smartphone setting	7
Application initial setting	7
Creating user account	9
Registering air conditioner	12
Wireless LAN settings of air conditioner	13
Naming air conditioner	15
4. Basic Usage	17
Starting / Stopping air conditioner operation	17
Switching operation mode	17
Changing temperature	18
Changing fan speed and airflow direction	19
Switching Vacant Property Mode	20
5. Using Favourites	21
6. Using Options	25
Shut-off reminder alert	26
Air conditioner error notification	27
Hi temp/low temp alert	28
Watching function	29
Home leave mode	29
Cooling specific	31
LED ON	32
Number of smartphones	32
7. Setting Weekly Timer	33

8. <u>Setting Timer by Specifying Date via Calendar</u>	35
<u>Clear the timer set from the calendar</u>	36
9. <u>Displaying Electricity Bill Graph</u>	38
10. <u>Displaying Operation Data Graph</u>	39
<u>Setting an operation data graph</u>	40
<u>Displaying the electricity bill in a graph</u>	40
<u>Displaying past operation data graphs</u>	41
<u>Downloading operation data</u>	41
11. <u>Updating Firmware</u>	42
12. <u>Main Menu</u>	44
<u>Canceling demo mode</u>	45
13. <u>Checking Alerts</u>	46
14. <u>Changing Application Settings</u>	48
<u>Switch Operation Modes</u>	49
<u>Switching to “Remote operation mode”</u>	49
<u>Switching to “Home restricted mode”</u>	50
<u>Reset Password</u>	52
<u>Language/Time Zone Settings</u>	54
<u>Application Initialization</u>	55
<u>Application Version Display</u>	57
15. <u>Troubleshooting</u>	58
<u>When the air conditioner that you want to register does not appear in the air conditioner list screen</u>	58
<u>How to delete a registered air conditioner</u>	59
<u>When an abnormality notification appears in the air conditioner list</u>	60
<u>When you forget your password and cannot log in</u>	60
<u>When operation is performed by another account</u>	61
<u>When "Shut-off reminder alert" does not turn on (For Android OS)</u>	61

1. Application Features

You can operate the air conditioner in each room at home or from outside.

- Setting operation reservation of every day of the week for each air conditioner
- Checking the power consumption of an air conditioner
- Setting the shut-off reminder alert
- Alerting if an air conditioner is abnormal

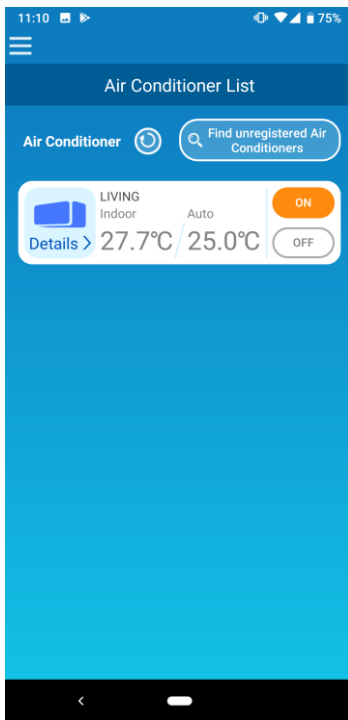


Figure 1-1



Figure 1-2

Note

Depending on the function of the connected air conditioner, the following operation will not be reflected in the operation of the air conditioner.

- Left/Right, 3D AUTO, Home leave mode, Electricity Bill Graph

Depending on the function of the connected air conditioner, the following operation will not appear on the screen:

- Home leave mode setting, LED ON, Electricity Bill Graph, Operation data graph

When the wireless LAN interface is connected, the timer setting is disabled on your home remote control depending on your air conditioner.

Please use the timer function of the application to set the timer.

2. Manipulation modes

- Remote operation mode

This mode allows you to operate the registered air conditioner via the smartphone application when you are out of the office.

Also, you can register and operate the air conditioner at home through a smartphone application.

- Home restricted mode

This mode allows you to register and operate the air conditioner at home via the smartphone application.

You can operate without data communication to the server.

Operation is not available when you are out.

- Demo mode

If you don't have an air conditioner compatible with a smartphone app, This mode allows you to experience the operation feel of remote operation mode.

3. Preparation for Use

- Smartphone setting

Turn on Wi-Fi of your smartphone.



Figure 3-1

- Application initial setting

Tap the Smart M-Air icon.



Figure 3-2



The application starts.

Figure 3-3

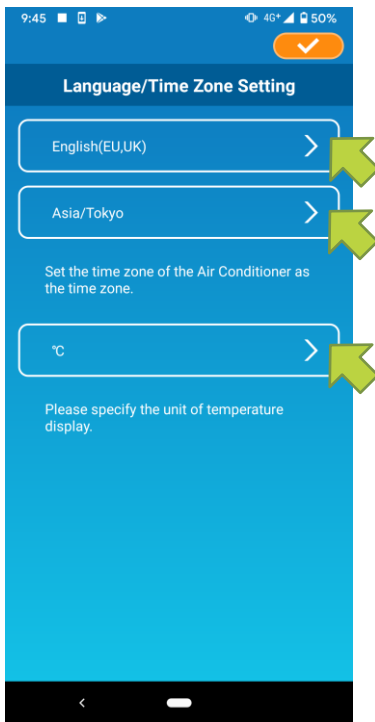


Figure 3-4

After startup, the “Language/Time Zone Settings” screen appears.

Select a language to use in the application.

Select a time zone. Select the time zone in which the air conditioner to operate via the application exists.

Choose the unit of temperature.


Finally, tap  on the top right to complete the setting.

The “Terms of Service” screen appears.


Read the text to the bottom and check the description.

If you agree it and use the application, tap [Agree].

When you tap [I don’t agree], the application exits.

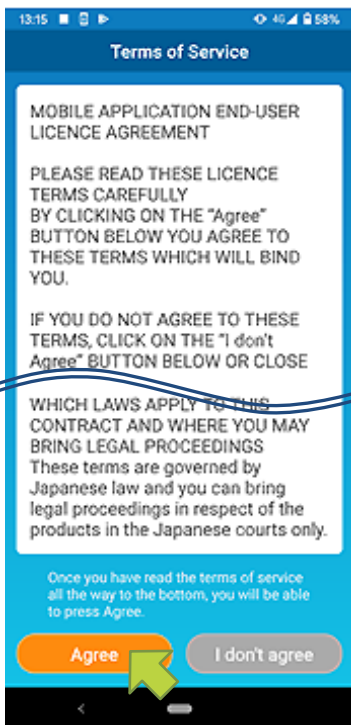

Android

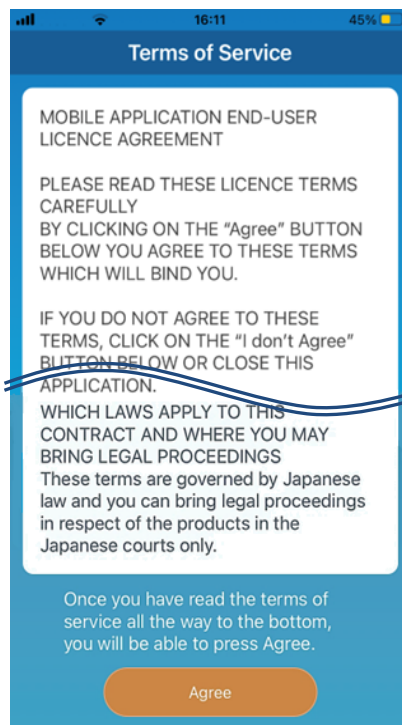

iOS

Figure 3-5

On the startup screen, select a mode to use.

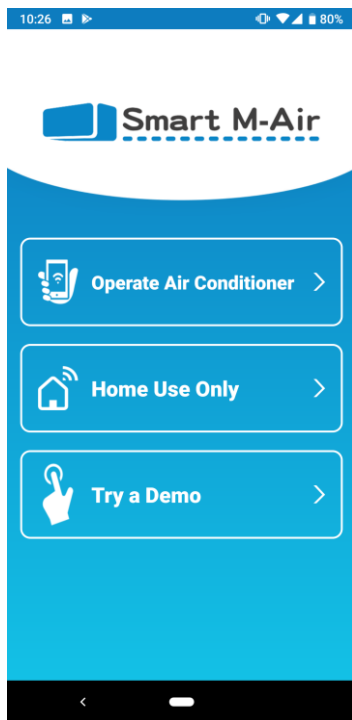


Figure 3-6

■ Operate Air Conditioner
(Remote operation mode)

Tap "Operate Air conditioner" for remote control or to use optional functions such as weekly timer.

→ To ["Creating user account"](#)

■ Home Use Only (Home restricted mode)

Tap "Home Use Only" to operate only at home. Some functions are restricted, but you can change to remote operation mode at any time.

→ To ["Registering air conditioner"](#)

Switching operation mode

→ To ["Changing Application Settings"](#)

■ Try a Demo (Demo Mode)

Tap "Try a Demo" to try out the app's features.
(Some features only)

• Creating user account

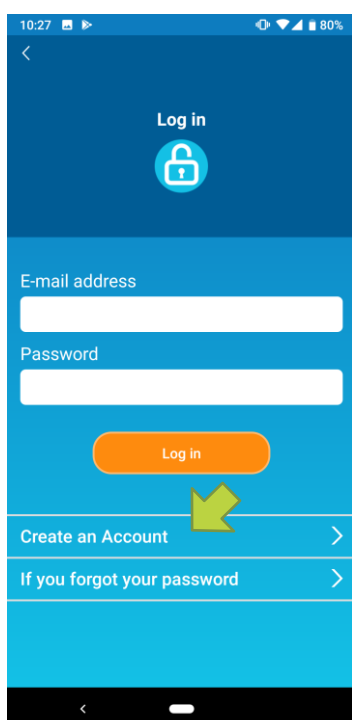


Figure 3-7

Tap [Create an Account].



Figure 3-8

Read the text of Handling of Personal Information to the bottom and check the description.
If you agree it and use the application, tap [Agree].

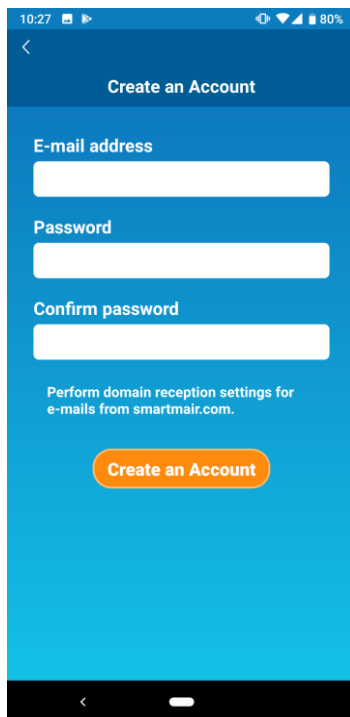


Figure 3-9

The "Create an Account" screen appears. Enter your e-mail address and password and tap the [Create an Account] button.

Note

- A password must be between 8 to 16 characters including at least one alphabetic character and one numeric character.
- Only one device (smartphone / tablet PC) can be used per account.
Do not use the same account on multiple devices.

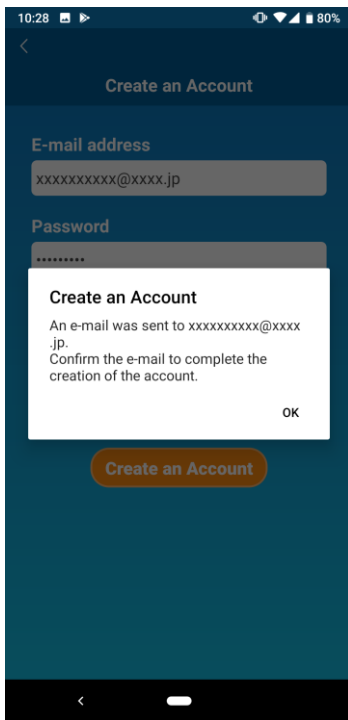


Figure 3-10

When the pop-up message “Create an Account” appears, tap [OK].

The email containing the URL of the authentication screen will be sent to the email address you entered, so please click the URL within 24 hours to complete the account creation.

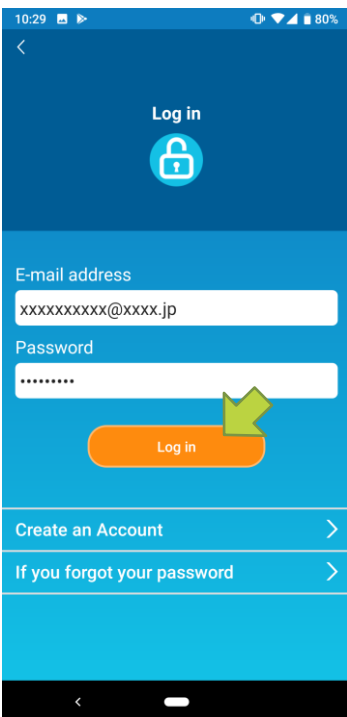


Figure 3-11

After the account is created, the “Log in” Screen appears on the application.

Click the URL written in the e-mail, enter the registered e-mail address and password, and tap the [Log in] button.

If you forget your password and cannot log in, tap "If you forgot your password" and set a new password.

→ To [“Reset Password”](#)

- Registering air conditioner

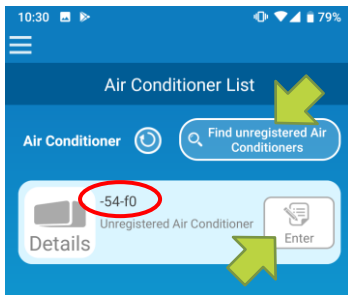


Figure 3-12

Use the “Air Conditioner List” screen to register an air conditioner to operate.

Tap the “Find unregistered Air Conditioners” button to display air conditioners that are not registered on your smartphone.

The air conditioner name (○ locations) is set based on the last 4 digits of the SSID on the label of the wireless LAN interface (for models with the built-in wireless LAN interface, the location where the air inlet panel of the indoor unit is opened).

Tap the [Enter] button.

- When the air conditioner is not displayed on the list screen
→ To [“When the air conditioner that you want to register does not appear in the air conditioner list screen”](#)
- To delete a registered air conditioner
→ To [“How to delete a registered air conditioner”](#)

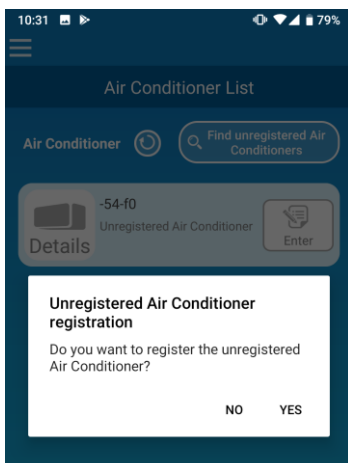


Figure 3-13

To register the air conditioner, tap [YES] on the pop-up message displayed.

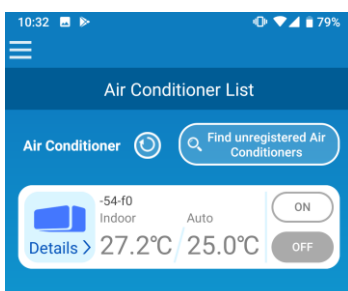


Figure 3-14

- Wireless LAN settings of air conditioner

If your wireless LAN router does not support WPS, manually make wireless LAN settings of your air conditioner.

Set the wireless LAN interface to the AP mode, and then change the Wi-Fi connection

destination of your smartphone to “Smart-M-Air-XXXX”.

“XXXX” is the last 4 alphanumeric characters of the SSID of the wireless LAN interface.

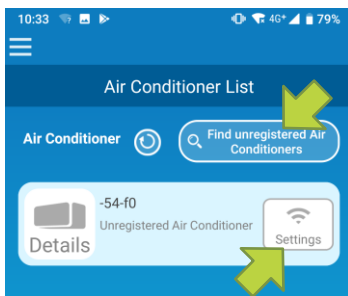


Figure 3-15

On the “Air Conditioner List” screen, tap the [Find unregistered Air Conditioners] button. The target air conditioner appears.

Tap the [Settings] button.


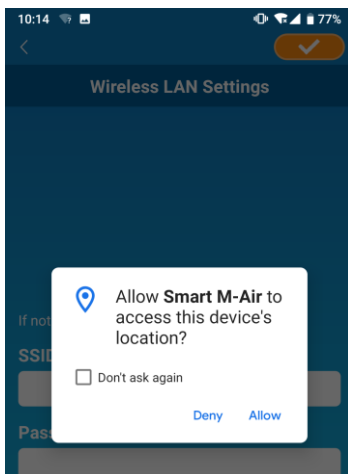


Figure 3-16


If you are prompted to permit access to location information, tap [Allow].

When you tap the network you want to set from the displayed list, the SSID appears in the "SSID" entry field at the bottom of the screen, enter "Password" of your wireless LAN router below it, and tap  in the top right.

If the network you want to set is not displayed in the list, enter "SSID" and "Password" of your wireless LAN router directly, then tap  on the top right to set.

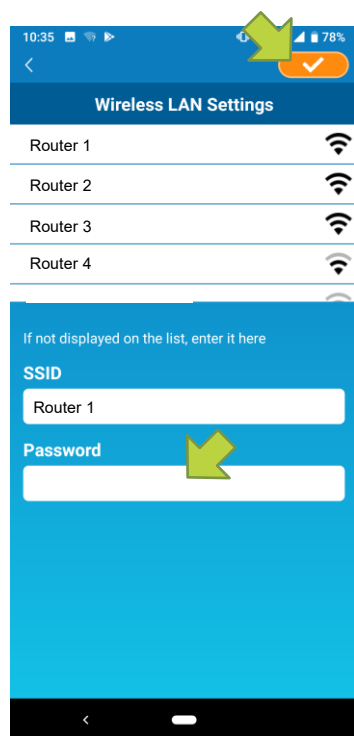

Android

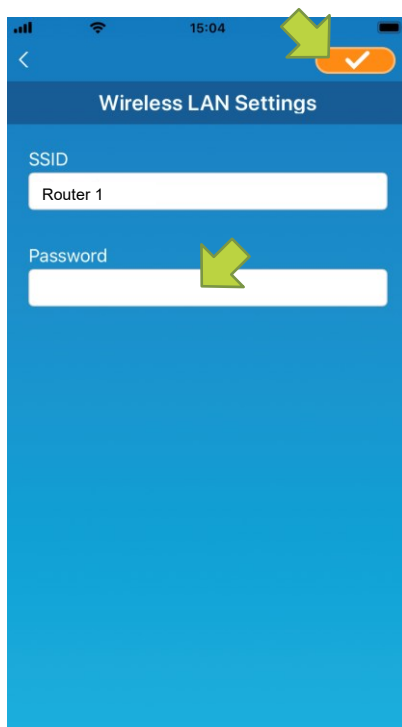

iOS

Figure 3-17

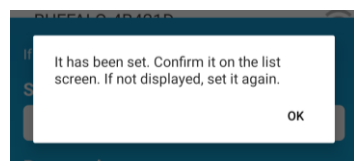


Figure 3-18

After the wireless LAN settings is completed, the air conditioner is registered.

- Naming air conditioner

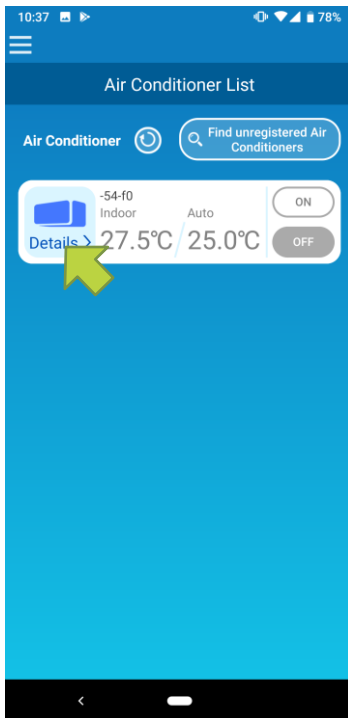


Figure 3-19

If you want to change the name of the air conditioner displayed in the application such as the air conditioner list screen, tap "Details" to display the detailed screen of the air conditioner.



Figure 3-20

Press and hold down (1 second) an air conditioner name. The “Edit Air Conditioner name” dialog appears. Use this to change the name.

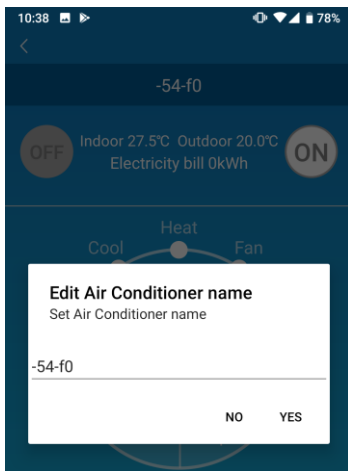


Figure 3-21

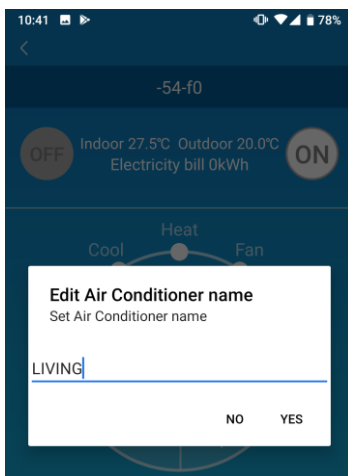


Figure 3-22

Enter a new air conditioner name and tap [YES].

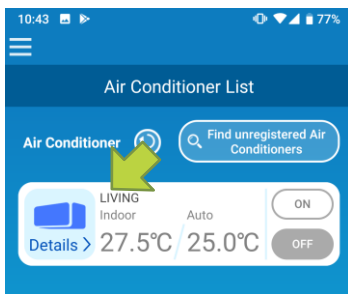


Figure 3-23

4. Basic Usage

- Starting / Stopping air conditioner operation

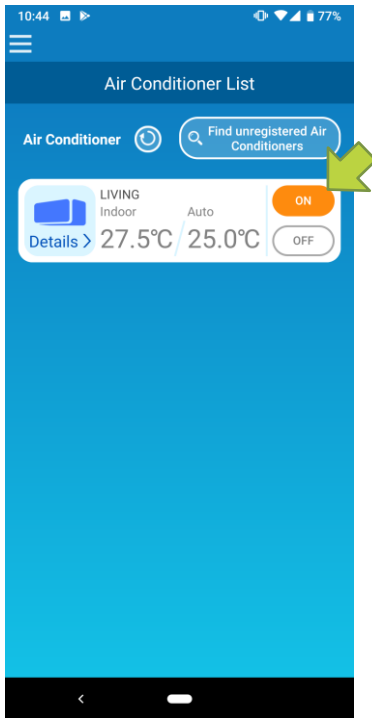


Figure 4-1

To start or stop the operation, tap the [ON] / [OFF] button of the air conditioner that you want to operate on the “Air Conditioner List” screen.

When the button color changes, switching is complete. (Grayed out when off)

To update to the latest information, tap  .

Note

- When operating an air conditioner from an external location, it may take up to one minute to complete the air conditioner operation.

- Switching operation mode

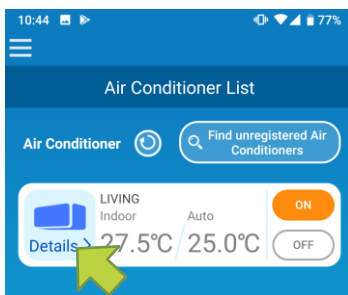


Figure 4-2

Tap an air conditioner that you want to switch the operation mode on the “Air Conditioner List” screen.



Figure 4-3

To change the “Operation mode”, tap each mode from “Auto” to “Dry”.

 appears when the air conditioner is in clean mode. To cancel clean mode, tap .

 appears when the weekly timer is set by this application.

 appears when the application is used at home where the air conditioner is set and connected to the application.

- Changing temperature


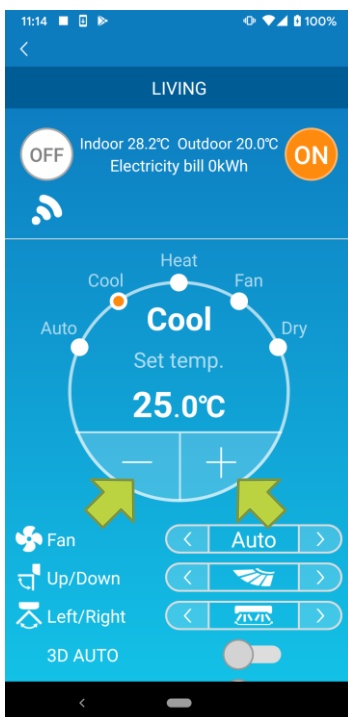


Figure 4-4

To set a desired temperature, tap  /  .
The current set temperature appears in the circle.

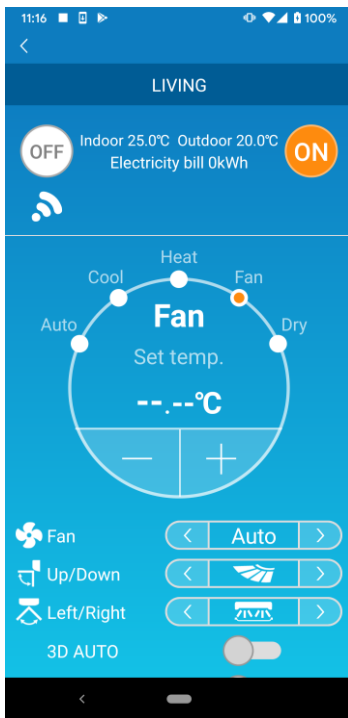

When the operation mode is Fan, Set temp. shows "-".

Figure 4-5

- Changing fan speed and airflow direction



Tap < / > to change settings.

Figure 4-6

- Switching Vacant Property Mode

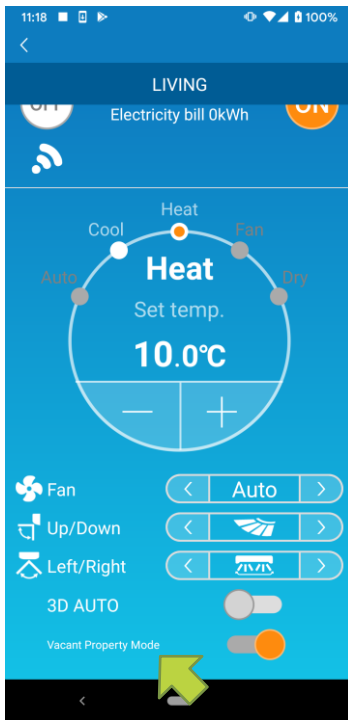


Figure 4-7

When Vacant Property Mode is ON, operation mode and Set temp. can be set as follows.

- Cool : Set temp. 31°C to 33°C (at 1°C intervals)

- Heat : Set temp. 10°C to 17°C (at 1°C intervals)

Only "Cool" or "Heat" can be set as an operation mode.

5. Using Favourites

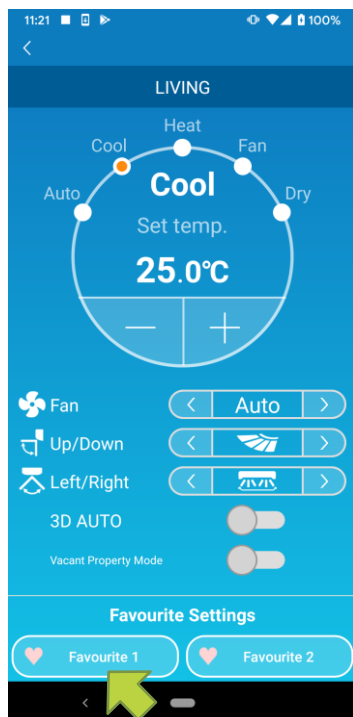


Figure 5-1

Register your desired settings of “Set temp”, “Operation mode”, “Fan”, “Up / Down” and “Left / Right” with Favourite. Tapping the [Favourite] button changes the current settings to the registered settings.

On the air conditioner details screen, press and hold down (1 sec) the [Favourite 1] or [Favourite 2] button. The “Favourite” screen appears.



Figure 5-2

Change each item to your favourite setting, and tap  on the top right to add it to Favourites.

Press  in the upper left of the screen to return to the operation screen.

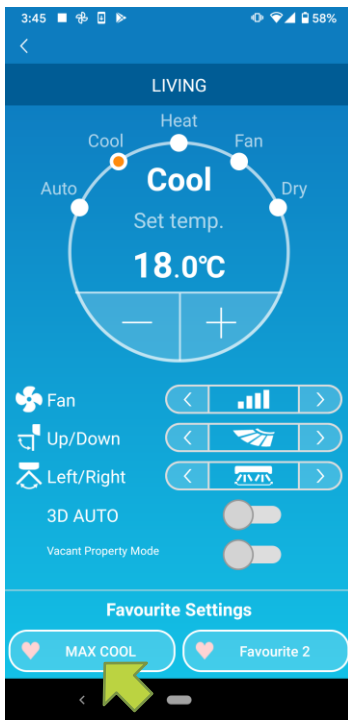


Figure 5-3

When you tap the [Favourite 1] or [Favourite 2] button, the current settings are changed to the favourite settings you tapped.



Figure 5-4

To change the name of the "Favourite" button, press and hold down the "Favourite" button for approximately 1 second. "Edit Favourite name" dialog appears to change the name.


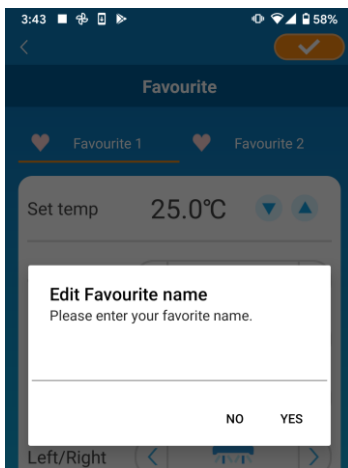


Figure 5-5

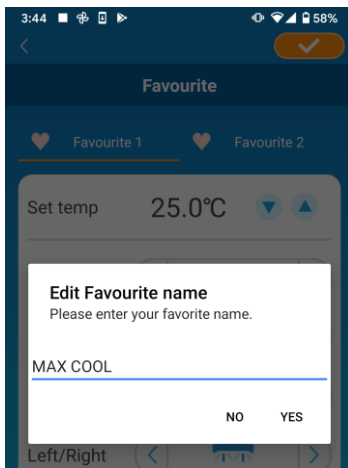

Enter the new favourite name and tap [YES].

Figure 5-6

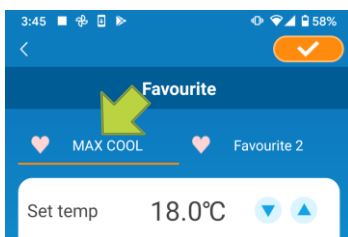


Figure 5-7

6. Using Options


You can make various option settings such as alerts and LED lighting, and check the number of accounts registered with an air conditioner.

Home restricted mode : Only “Home Leave Mode”, “Cooling specific” and “LED ON” are operable.

Demo mode : Options are not operable.

You can switch to remote operation mode using "Changing Application Settings" in the main menu.


→ To [“Changing Application Settings”](#)

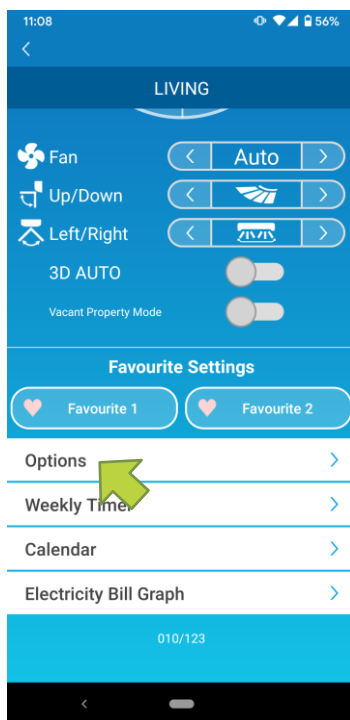

Tap [Options] on the lower part of the air conditioner details screen.
The “Options” screen appears.

Figure 6-1

Only "LED ON" is ON by default.

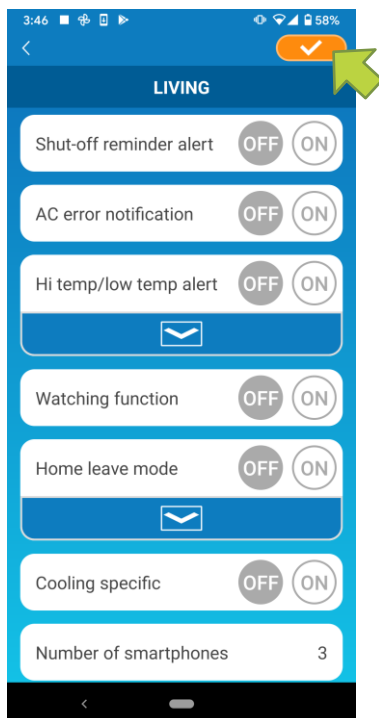

Switch between [ON] and [OFF], and tap  on the top right of the screen to save the settings you changed.

Note


- Shut-off reminder alert, AC error notification, Hi temp/low temp alert, Watching function can be used with "Remote operation mode".

Figure 6-2

• Shut-off reminder alert

If you are more than 1 km away from the air conditioner you are driving, you can receive a push notification to the smartphone application.


- To receive alerts, tap [ON].

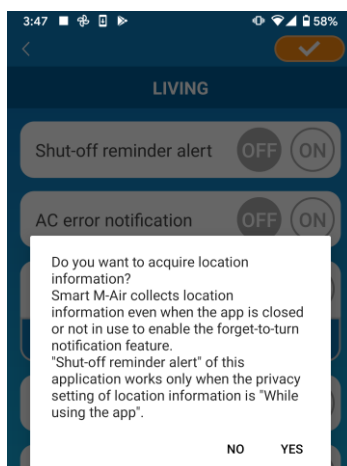

When the pop-up message appears, tap [YES] and then tap  on the top right.

Figure 6-3

- To not to receive alerts, tap [OFF].

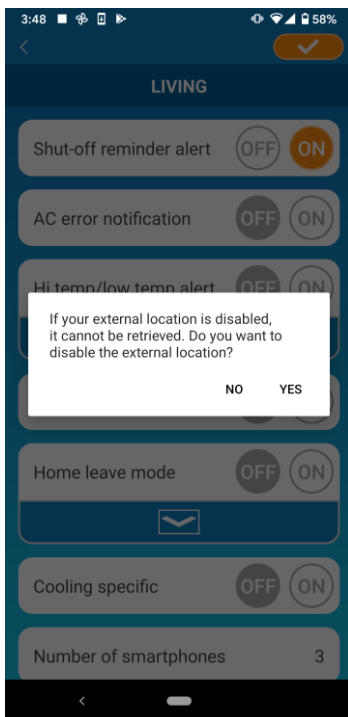

When the pop-up message “If your external location is disabled, it cannot be retrieved. Do you want to disable the external location?” appears, tap [YES] and then tap  on the top right.

Figure 6-4

Note

- Acquisition of location information is performed by using the location of your smartphone as the location of the air conditioner. Perform location information acquisition near your air conditioner.

• AC error notification (Air conditioner error notification)

If any abnormality is detected in your air conditioner, an e-mail is sent to the registered e-mail address.


→ To “[When an abnormality notification appears in the air conditioner list](#)”

- To receive notifications, tap [ON] and then tap  on the top right.
- To not to receive notifications, tap [OFF] and then tap  on the top right.

- Hi temp/low temp alert

When the air conditioner reaches the specified high/low temperature condition, a push notification is sent to the smartphone application.

- To receive alerts, tap [ON] and enter the high and low temperatures and then tap  on the top right.
- To display the high and low temperatures input area, tap . To hide it, tap .

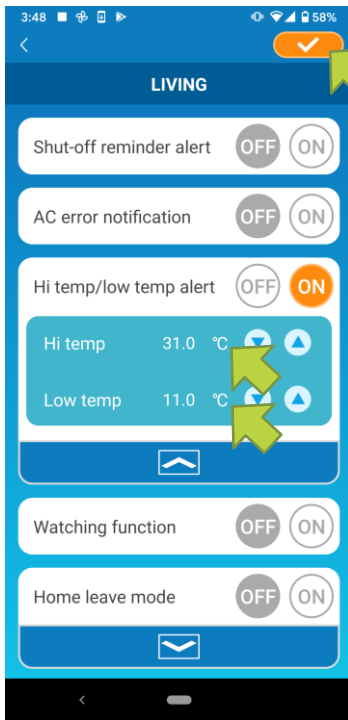

Note

- When the room temperature is higher / lower than the temperature specified here, alerts are sent.
If you set the high temperature at 31°C, an alert is sent when the room temperature exceeds 31°C. No alert is sent at 31°C.
- Setting only either of high or low temperature receives alerts only for high or low temperature.

Figure 6-5

- To not to receive alerts, tap [OFF] and then tap  on the top right.

- Watching function

When the air conditioner is controlled other than your smartphone, an e-mail is sent to the registered e-mail address.

Note

- The notification also applies to the operation with the timer of the air conditioner itself and the end of internal clean operation.
-

- To receive alerts, tap [ON] and then tap  on the top right.
- To not to receive alerts, tap [OFF] and then tap  on the top right.

- Home leave mode

When the room temperature is lower than a setting temperature, heating is turned on automatically.

When the room temperature is higher than a setting temperature, cooling is turned on automatically.

- To use “Home leave mode”, tap [ON].

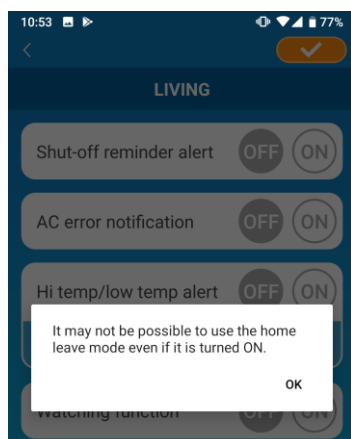


Figure 6-6

When the pop-up message “It may not be Possible to use the Home leave mode even if it is turned ON.” appears, tap [OK] and then tap  on the top right.

Note

- There is no "Home leave mode" depending on the air conditioner connected. In this case, "ON" has no effect.
-

- To not to use “Home leave mode”, tap [OFF] and then tap  on the top right.

- To change the setting of home leave mode, tap . To hide them, tap . The following settings can be changed.

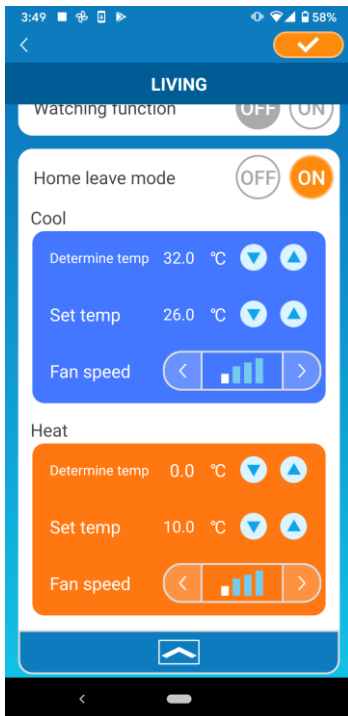


Figure 6-7

- Determine temp : Set the preferred outside temperature to start the operation of the air conditioner in cooling/heating mode.

Allowable setting range in cooling :
26°C to 35°C (at 3°C intervals)

Allowable setting range in heating :
0°C to 15°C (at 5°C intervals)

- Set temp : Set the preferred indoor temperature to operate in cooling/heating mode.

Allowable setting range in cooling :
26°C to 33°C (at 1°C intervals)

Allowable setting range in heating :
10°C to 18°C (at 1°C intervals)

- Fan speed : Set the fan speed in cooling/heating mode.

[example]

Cooling → When you input the determine temp. as 32°C, set temp. as 26°C and the fan speed at the slowest, the air conditioner will start operating at 26°C with the slowest fan speed when the outside temperature reaches to 32°C.


- Cooling specific

If you set it as an air conditioner for cooling only, you won't be able to use the heating in the smartphone application.

Note

- If your air conditioner is for cooling only, the heating will not be available even if “Heat” is set to “ON”.

■ To use “Cooling specific”, tap [ON] and then tap  on the top right.

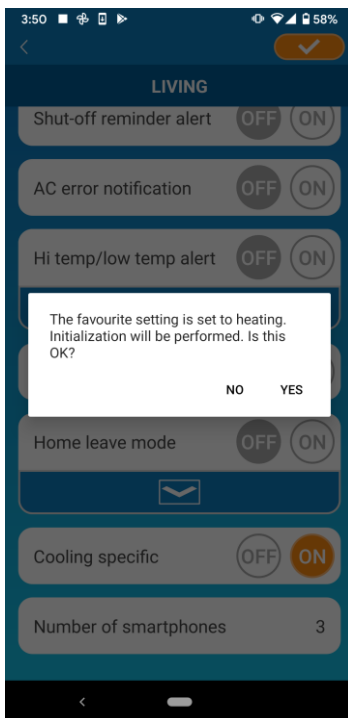

- When “ON” is set or “Heat” is set to favourites, the pop-up message asking whether to initialize favourites appears.

If you tap [YES] on the pop-up message, the “Cooling specific” setting is turned “ON” to initialize the favourite with heating set.

Figure 6-8

■ To not to use “Cooling specific”, tap [OFF] and then tap  on the top right.

- LED ON

Lights up the LED of the wireless LAN interface (WF-RAC).

- To use LED lighting, tap [ON] and then tap  on the top right.
- To not to use LED lighting, tap [OFF] and then tap  on the top right.

Note

- For built-in models, this item is not appeared on the screen.
-


- Number of smartphones

Displays the number of smartphones (up to four) registered with the air conditioner.

- To delete a registered air conditioner
→ To "[How to delete a registered air conditioner](#)"

7. Setting Weekly Timer

Makes the timer setting for every day of the week.

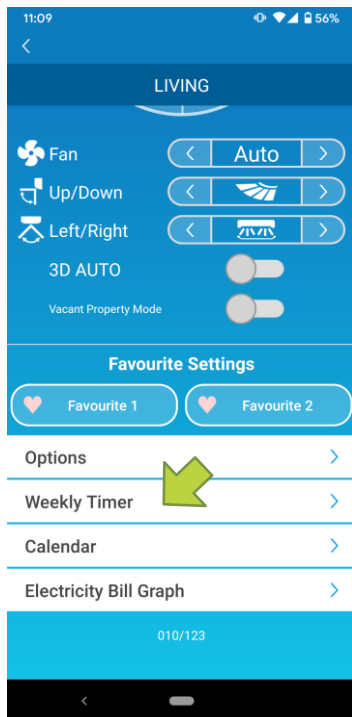

Tap [Weekly Timer] on the lower part of the air conditioner details screen.

The “Weekly Timer” screen appears.

Figure 7-1

Tap  on the top right of the screen to save the settings you changed.



Tap the day of the week you want to set to display the timer list for that day of the week.

You can set up to six timers for each day of the week, but you cannot set the same time for the same day.

Figure 7-2

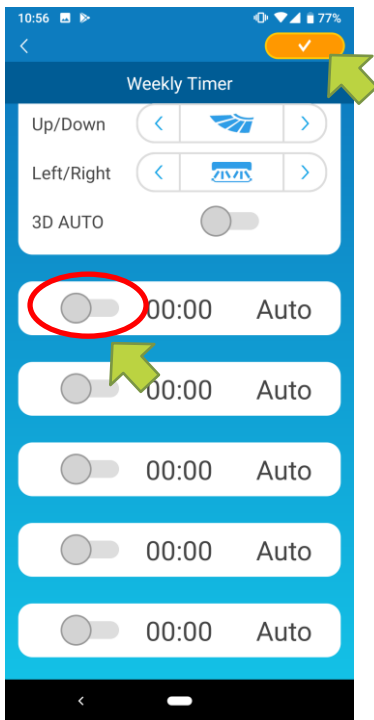


Figure 7-3

A disabled timer shows the time and operation mode only.

Tap the switch at  to enable and edit.

Edit each item and tap  on the top right to set the timer on the target day.



Figure 7-4


When at least one timer setting is ON, the timer icon appears on the air conditioner detail screen.

The timer you set here is applied to every week on that day.

To turn off the timer only on a certain day, or to apply the timer of another day, set individually from the “Calendar” screen.

8. Setting Timer by Specifying Date via Calendar

When you set the weekly timer, the same timer is applied to the same day every week. To turn off the timer or set the timer of a different day on a certain day, set individually from the “Calendar” screen.

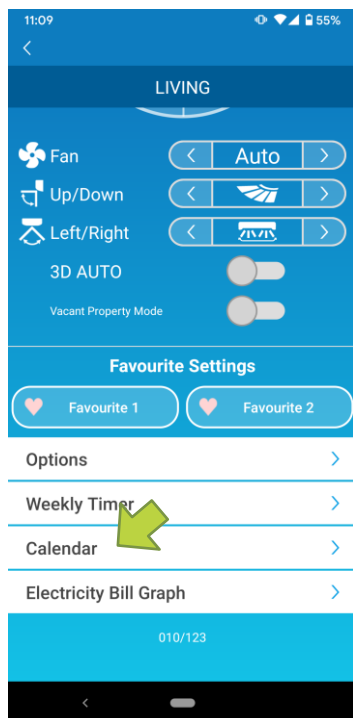

Tap [Calendar] on the lower part of the air conditioner details screen.

The [Calendar] screen appears.

Figure 8-1

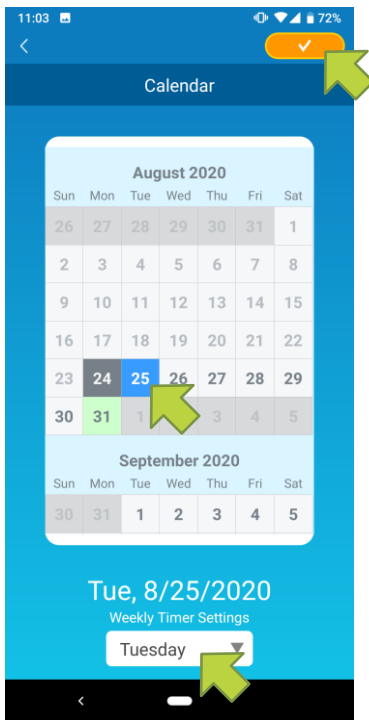


Figure 8-2

Tap the date of the calendar. Select the timer of the day of the week that you want to apply from “Weekly Timer Settings” and tap  on the top right of the screen.

If you select “OFF” from “Weekly Timer Settings”, the weekly timer is not applied.

When the timer of a different day of the week is applied or the timer is turned off, the date appears in green.

- Clear the timer set from the calendar


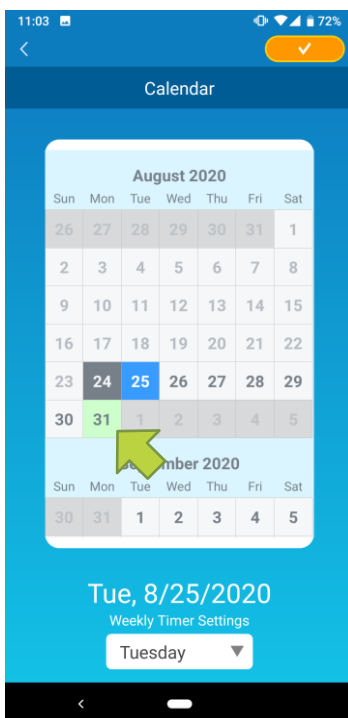



Figure 8-3

Tap the date whose timer you want to clear.

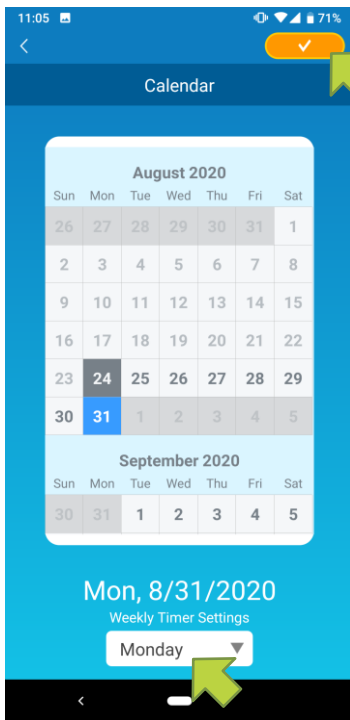

From “Weekly Timer Settings”, select the same day of the week as the date to clear and tap .

Figure 8-4

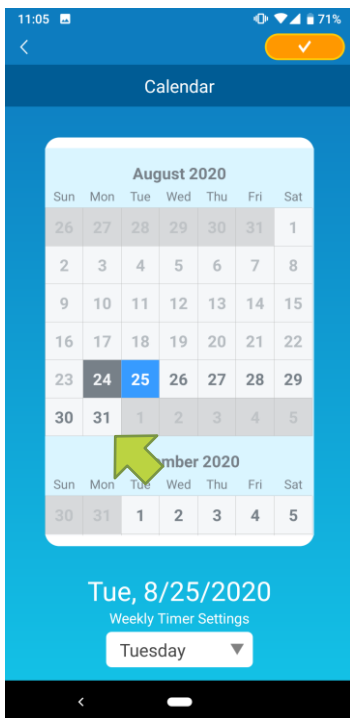

When cleared, the background of the date is displayed in white.

Figure 8-5

9. Displaying Electricity Bill Graph

Displays an electricity bill by month on a graph. You can also set the electricity unit cost.

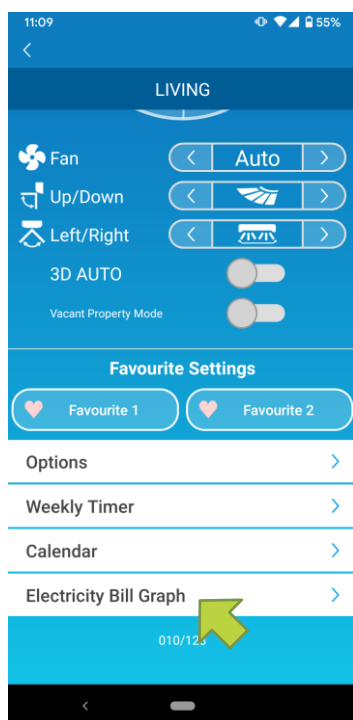


Figure 9-1

Note

- An operation data graph is not displayed in the app or this function is disabled depending on the model of the air conditioner to be connected.

Tap [Electricity Bill Graph] on the lower part of the air conditioner details screen.

The “Electricity Bill Graph” screen appears.

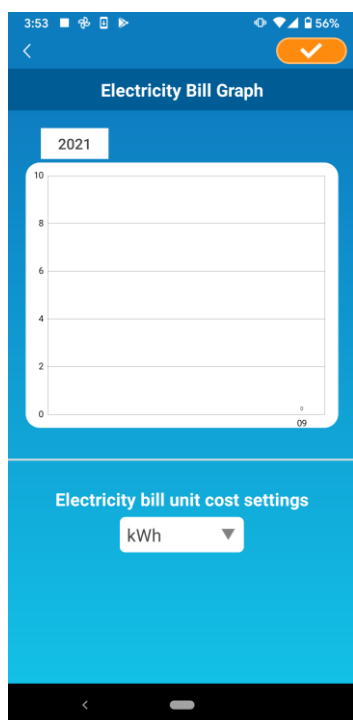


Figure 9-2

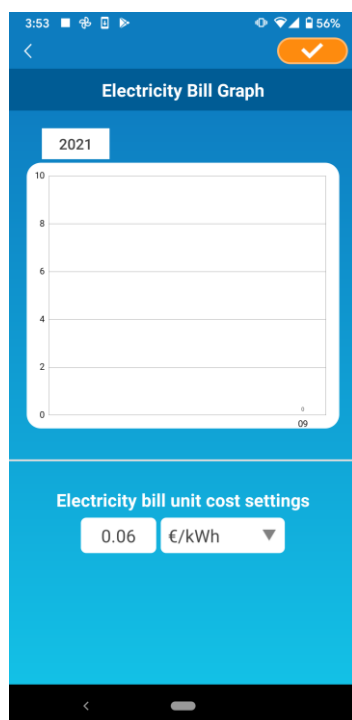


Figure 9-3

If you change the electricity bill unit cost settings, you can enter a unit price by changing the unit of measure.

After editing, tap  to save the setting.

10. Displaying Operation Data Graph

Operation data such as power consumption and temperature is displayed in a graph.

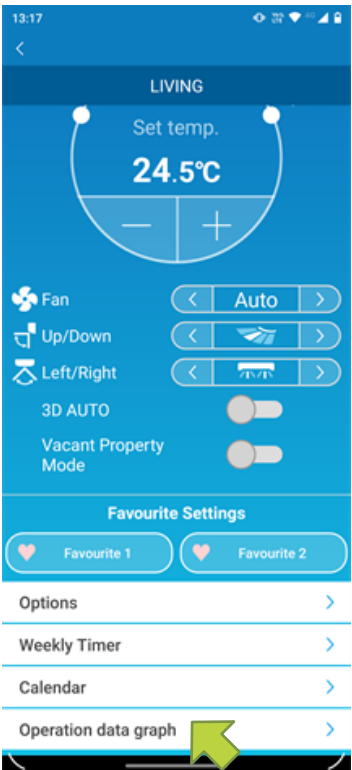


Figure 10-1

Note

- An operation data graph is not displayed in the app or this function is disabled depending on the model of the air conditioner to be connected.

Tap "Operation data graph" at the bottom of the air conditioner details screen to display the "Operation data graph" screen.

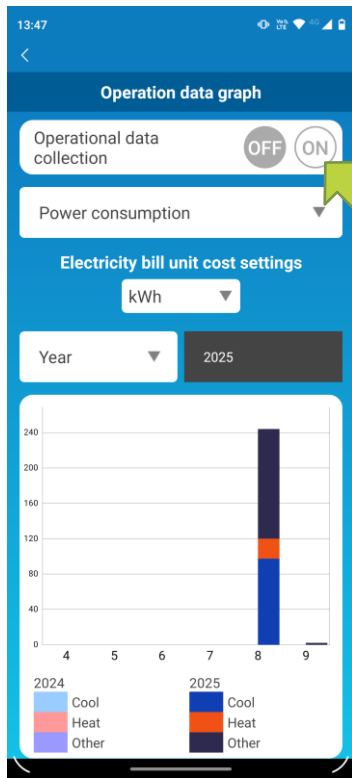


Figure 10-2

Tap "ON" at the top of the screen to collect operation data.

Note

- If the air conditioner is not connected to the Internet, operation data will not be collected.

- Setting an operation data graph

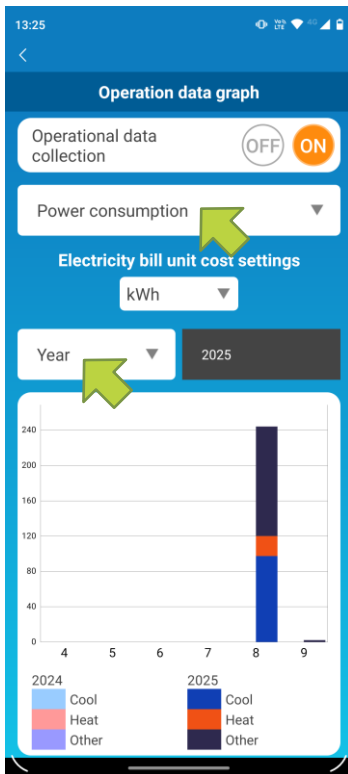


Figure 10-3

You can select the graph type from the following four types: "Power consumption", "Capacity", "Efficiency", and "Temp".

You can also select the time unit for the graph from the following three types: "Year", "Month", and "Date", where "Year" displays one year's worth of operation data, "Month" displays one month's worth of operation data, and "Date" displays one day's worth of operation data.

- Displaying the electricity bill in a graph

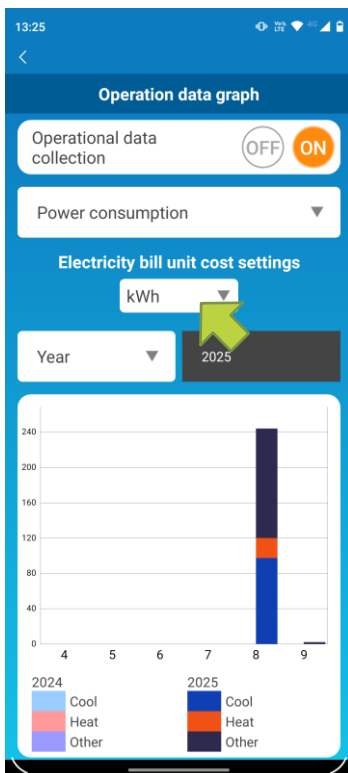


Figure 10-4

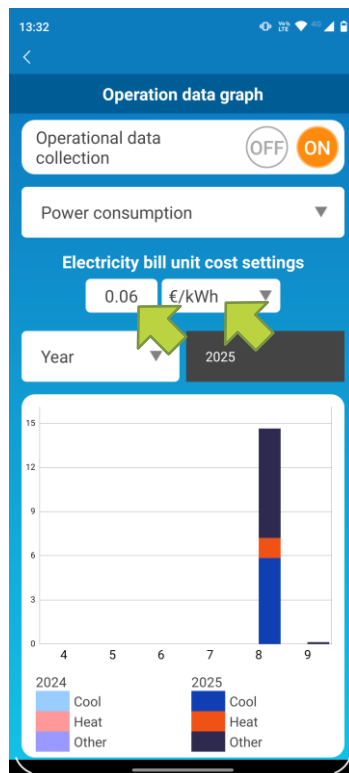


Figure 10-5

When you set the graph type to "Power consumption", the "Electricity bill unit cost settings" screen is displayed.

If you want to change the electricity bill unit cost settings, change the unit; you will then be able to enter the unit price.

After the data is entered, the electricity bill will be displayed in a graph.

- Displaying past operation data graphs

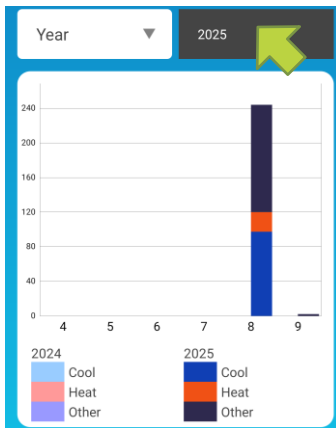


Figure 10-6

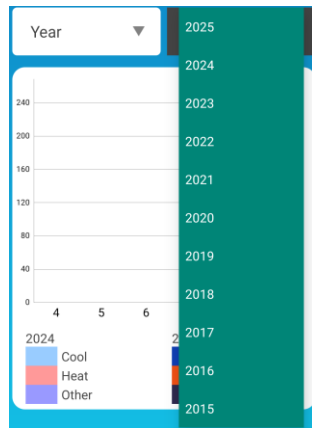


Figure 10-7

If the time unit is set to "Year" or "Month", tap the year or month in the upper left corner of the graph to select the year or month you want to view in the graph.

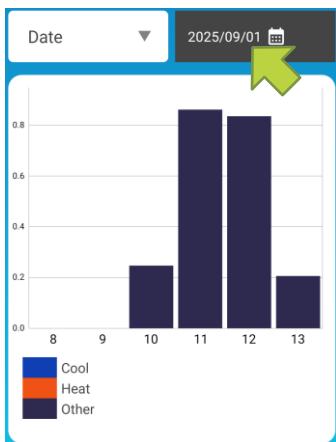


Figure 10-8

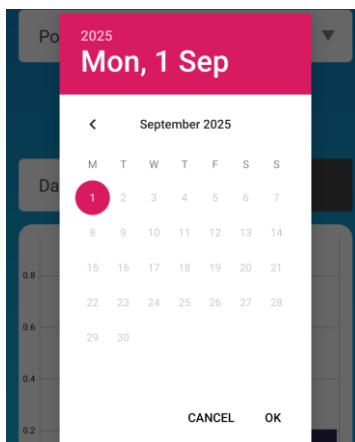


Figure 10-9

If the time unit is set to "Date", tap the date in the upper left corner of the graph and select the date you want to view in the graph from the calendar.

- Downloading operation data


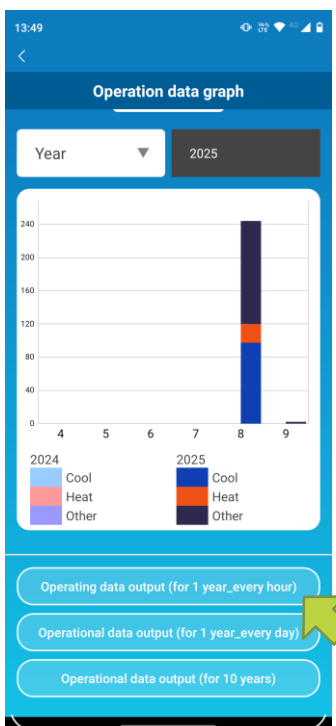


Figure 10-10

Tap "Operation data output" at the bottom of the screen to download the operation data collected to date as a CSV file.


11. Updating Firmware

If the firmware of your wireless LAN interface is not up to date, an exclamation mark  appears on the “Air Conditioner List” screen.

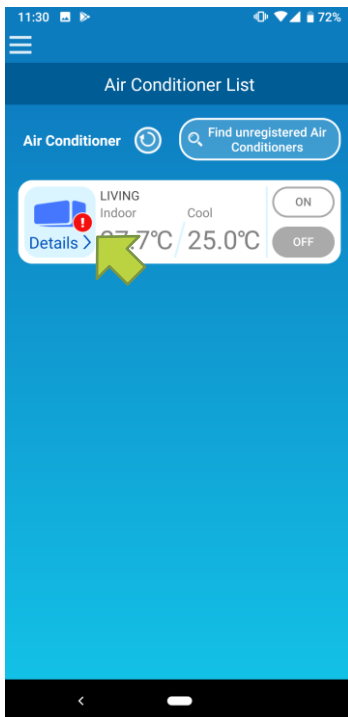

Tap [Details] to display the air conditioner details screen.

Figure 11-1

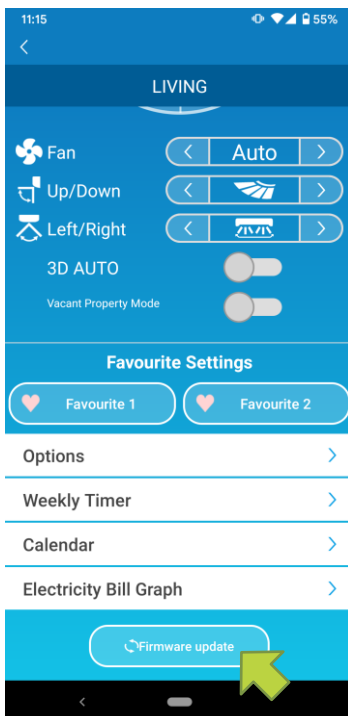

Tap the [Firmware update] button.

Note

- Perform the firmware update in the same wireless LAN area as the air conditioner.
- Please turn off the air conditioner in advance.
- If firmware update is disabled, the button is not enabled.

Figure 11-2

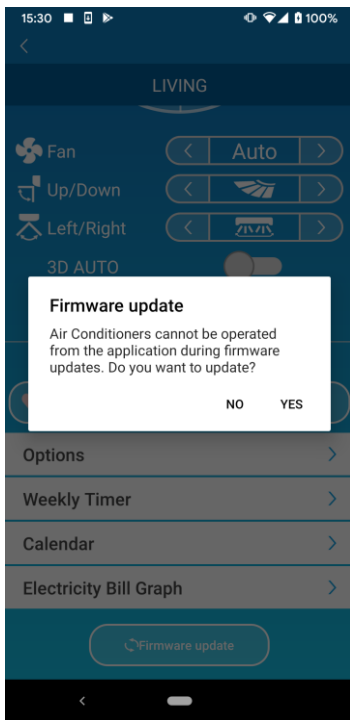


Figure 11-3

Tap [YES] to update the firmware to the latest one.

The firmware update takes 10 minutes (Max).
The operation from the application is not accepted during that period.

If after 10 minutes (Max) the "Firmware update" button appears, retry the firmware update.

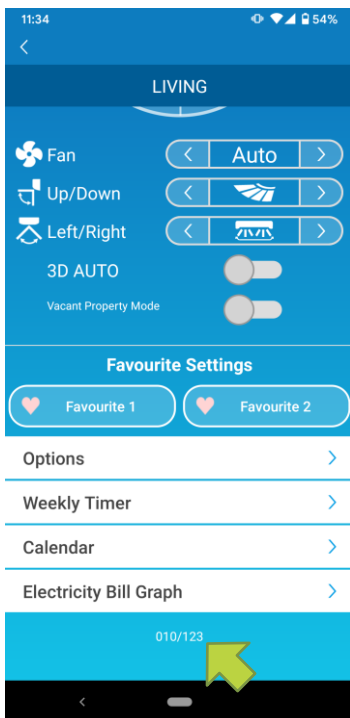


Figure 11-4

When the firmware becomes up to date, the firmware version appears instead of the [Firmware update] button.

12. Main Menu

Tap the menu button () that appears on the top left in the screen such as “Air Conditioner List”, to display the main menu.


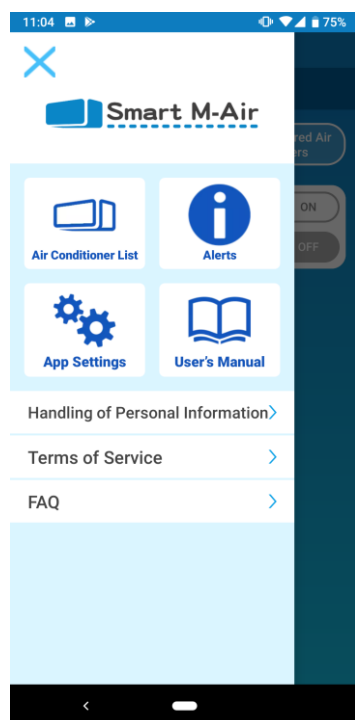


Figure 12-1

- Air Conditioner List : Operates or sets an Air conditioner.
- Alerts : Checks alerts.
- App Settings : Switches the operation mode or sets the password.
- User's Manual : Displays the user's manual.
- Handling of Personal Information : Displays the handling of personal information.
- Terms of Service : Displays the terms of service.
- FAQ : Displays the FAQ.


- Canceling demo mode

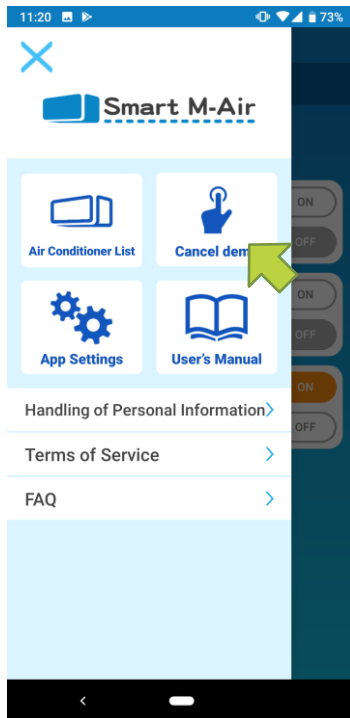

In the demo mode
Cancel demo : Exits the demo mode.


Figure 12-2

13. Checking Alerts

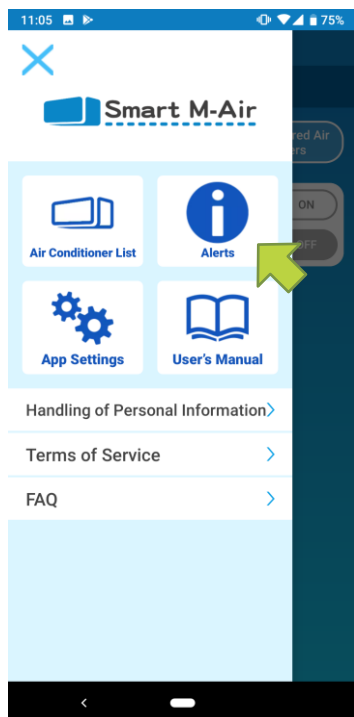

Open the main menu and tap [Alerts].

Figure 13-1

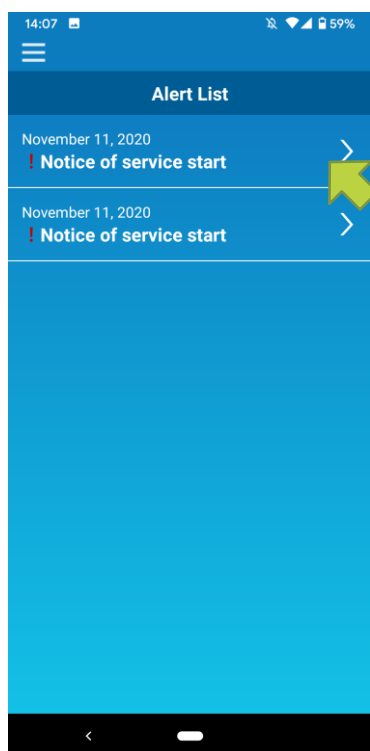

A list of alerts appears.

Tap the subject to see the content.
! indicates an unread alert.

Figure 13-2

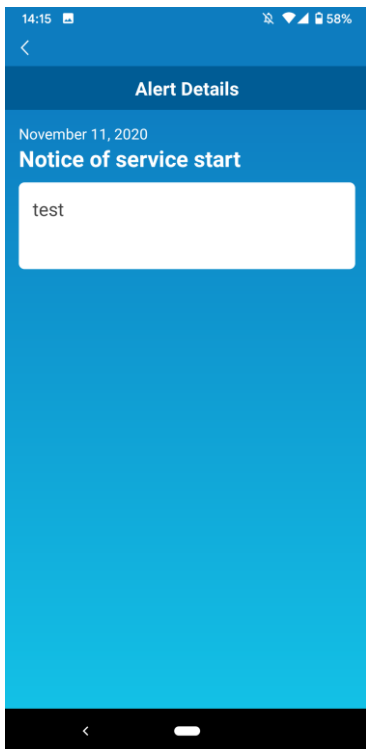


Figure 13-3

14. Changing Application Settings

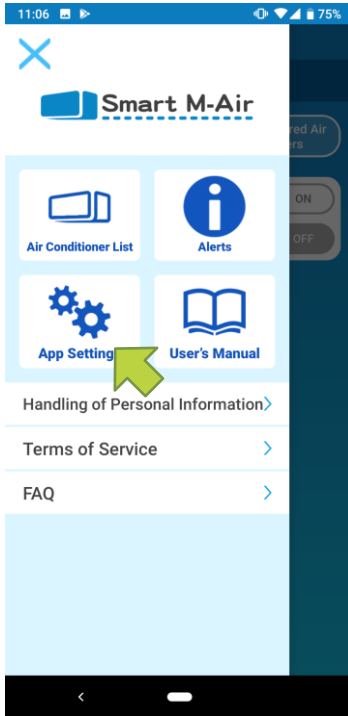


Figure 14-1

Open the main menu and tap [App Settings].

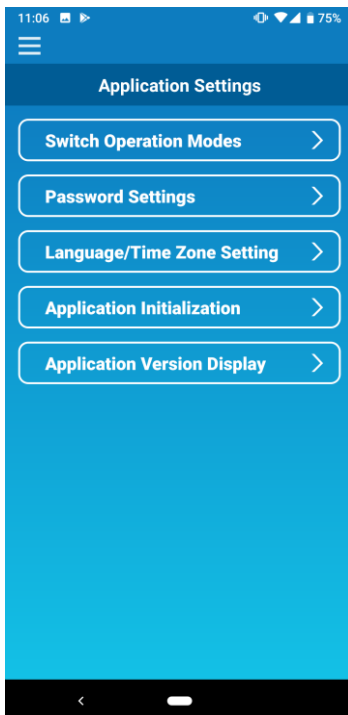


Figure 14-2

The “Application Settings” screen appears.

- Switch Operation Modes: Switches between the remote operation mode and home restricted mode.
→ To [“Switch Operation Modes”](#)
- Password Settings: Sets a password.
→ To [“Reset Password”](#)
- Language/Time Zone Settings: Sets a language to use in the smartphone application and a time zone for an air conditioner.
→ To [“Language/Time Zone Settings”](#)
- Application Initialization: Initializes the smartphone application.
→ To [“Application Initialization”](#)
- Application Version Display: Displays the version of your smartphone application.
→ To [“Application Version Display”](#)

Note


- In "Home restricted mode", you cannot operate "Password Settings". In "Try a Demo", only "Language/Time Zone Settings" and "Application Version Display" can be operated. Functions that cannot be operated are displayed in gray, and nothing is displayed even if you tap them.

• Switch Operation Modes

You can see the current operation mode.

To switch the operation mode, select the desired mode and tap  .

• Switching to "Remote operation mode"

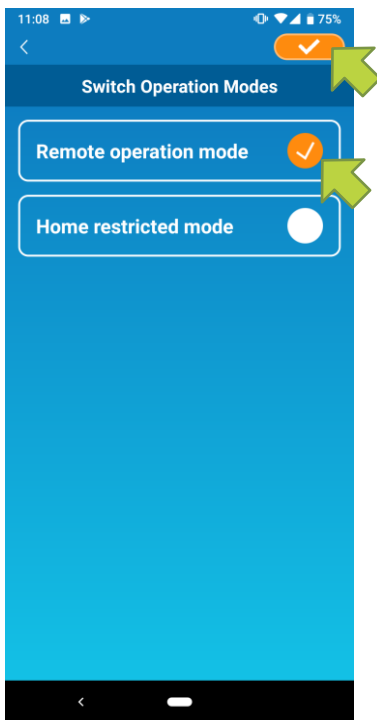

Tap [Remote operation mode] → Tap  on the top right to switch the mode.

Figure 14-3

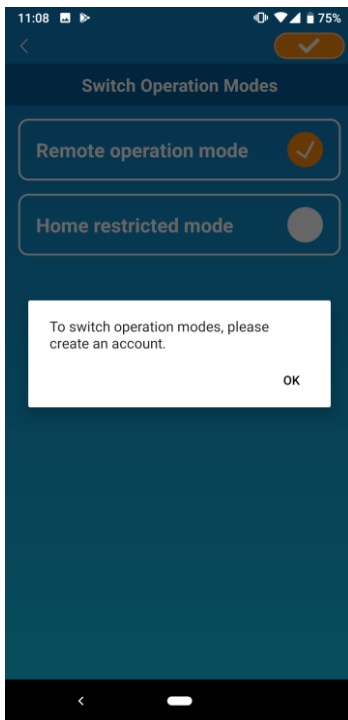


Figure 14-4

When the account creation pop-up message appears, tap [OK], agree with the handling of personal information, and create an account.

→ To [“Creating user account”](#)

- Switching to “Home restricted mode”

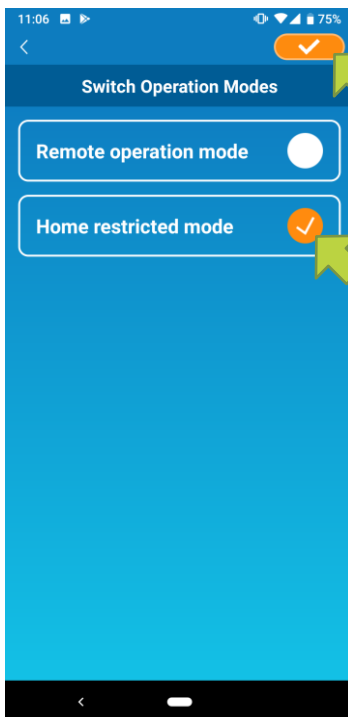


Figure 14-5

Tap [Home restricted mode] → Tap  on the top right to switch the mode.

Note

- Note that if you switch the mode to “Home restricted mode”, the account information used in “Remote operation mode” is deleted.

The popup for remote control disabled and the popup for deleting server data will appear, so tap [YES].

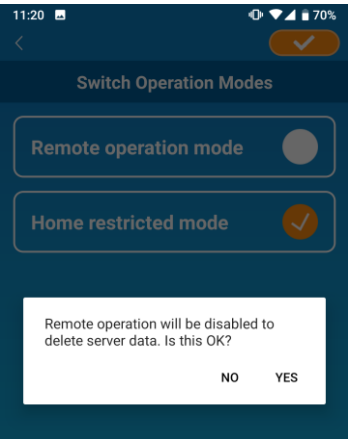


Figure 14-6

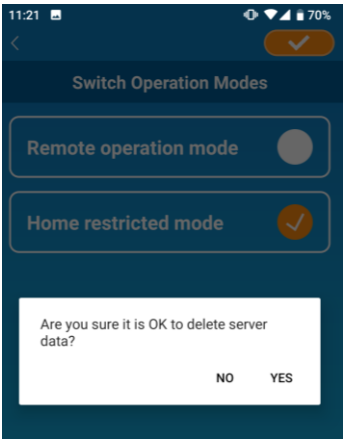


Figure 14-7

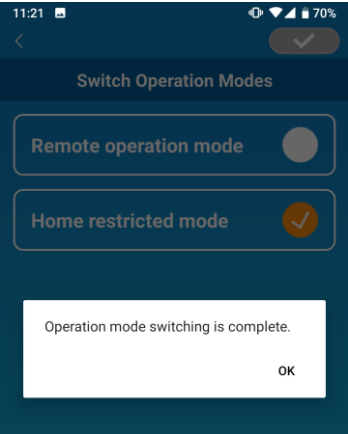


Figure 14-8

When the operation mode switching completion pop-up message appears, tap [OK].

• Reset Password

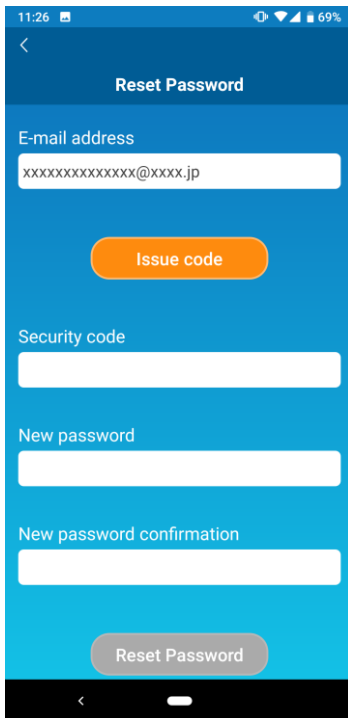


Figure 14-9

Enter the registered e-mail address and tap the [Issue code] button.

Note

- After tapping the [Issue code] button, keep this screen displayed until the password resetting is completed.
If you tap  and return to the previous screen, these operations are canceled.

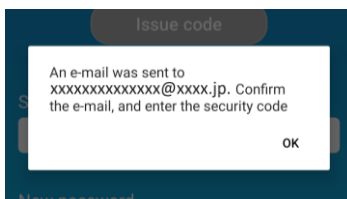


Figure 14-10

When the e-mail sending pop-up message appears, tap [OK].

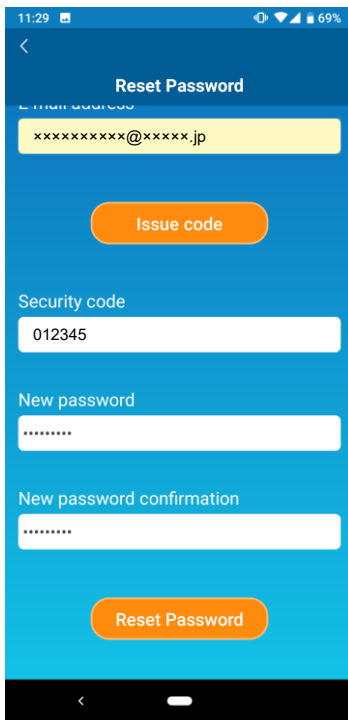


Figure 14-11

An e-mail with a security code will be sent to the e-mail address you entered. Enter “Security code” and “New password” and tap [Reset Password] to update your password.

Note

- A password must be between 8 to 16 characters including at least one alphabetic character and one numeric character.


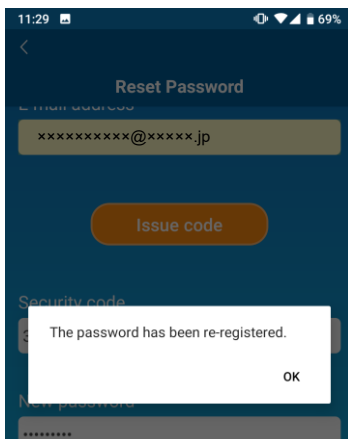


Figure 14-12

- Language/Time Zone Settings

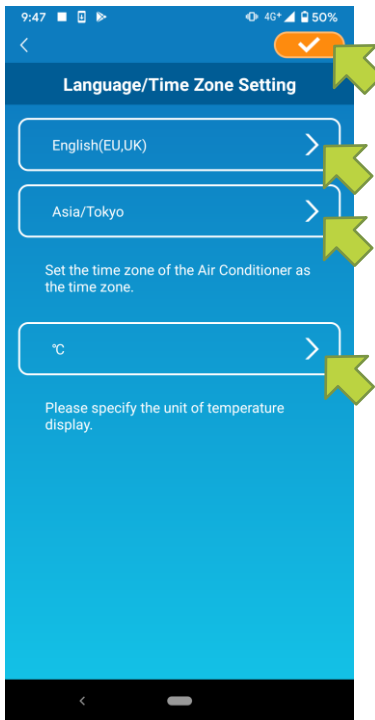

The “Language/Time Zone Settings” screen appears.

Select a language to use in the application.

Select a time zone. Select the time zone in which the air conditioner to operate via the application exists.

Choose the unit of temperature.

Finally, tap  on the top right to complete the setting.


Figure 14-13

- Application Initialization

Initializes the smartphone application.

Note

- Note that if you initialize the application in “Remote operation mode”, the information of the account logged in is deleted.
-

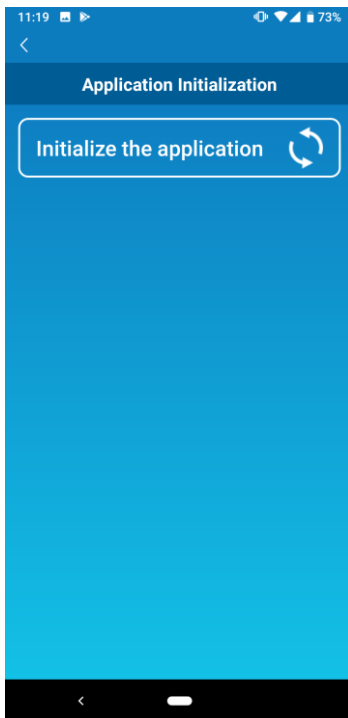

Tap [Initialize the application].

Figure 14-14

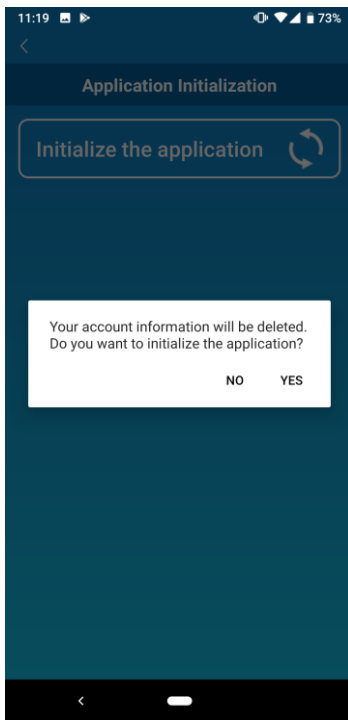


Figure 14-15

When the pop-up message "Your account information will be deleted. Do you want to initialize the application?" appears, tap [YES].

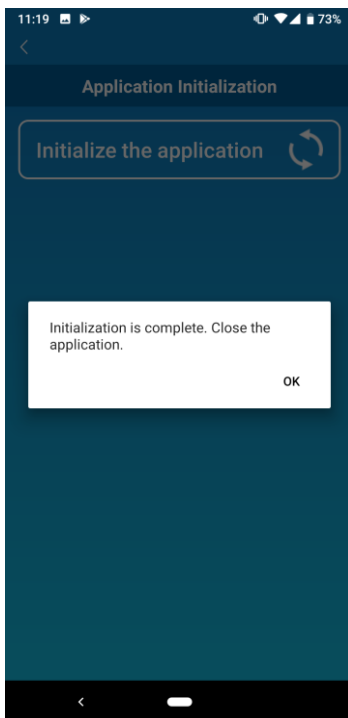


Figure 14-16

When the pop-up message "Initialization is complete. Close the application." appears, tap [OK] to close the application.

- Application Version Display

Displays the version of your smartphone application.


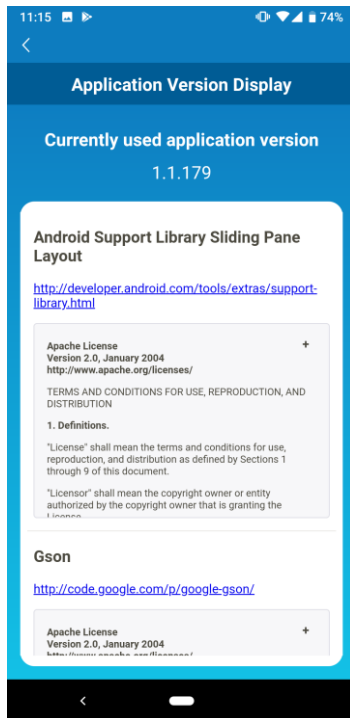


Figure 14-17

15. Troubleshooting


- When the air conditioner that you want to register does not appear in the air conditioner list screen

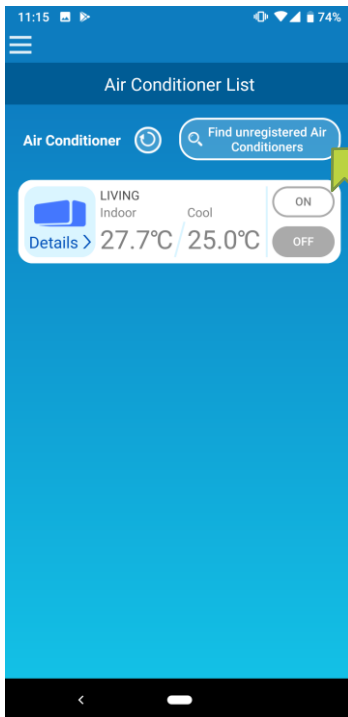

Tap the [Find unregistered Air Conditioners]

Button to search unregistered air conditioners and update the “Air Conditioner List” screen.

Figure 15-1

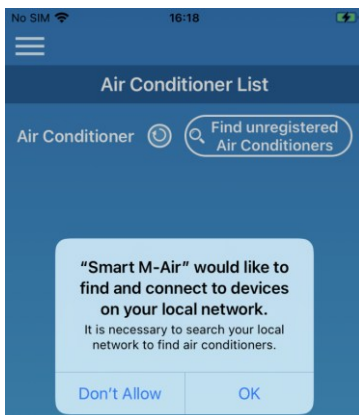


When asked for "search your local network" on iOS, tap the "OK" button.

If you accidentally tap the "Don't Allow" button, change the Smart M-Air's "local network" in the iOS app permission settings to "ON", then tap the "Find unregistered Air Conditioner" button again.


Figure 15-2

- How to delete a registered air conditioner

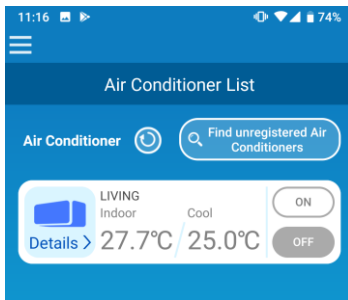

To delete a registered air conditioner, press and hold down (2 seconds) the icon of the target air conditioner.


Figure 15-3

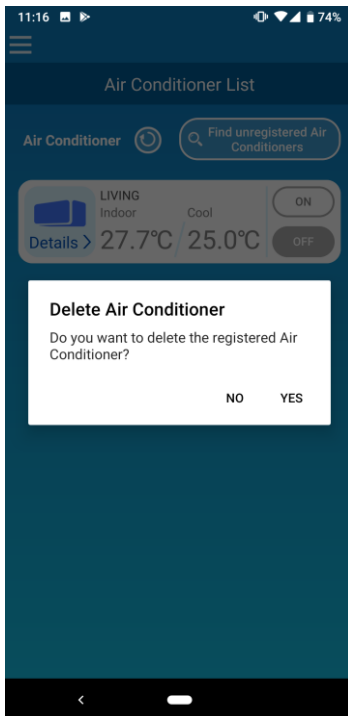

When the deleting air conditioner pop-up Message appears, tap [YES].

Figure 15-4

- When an abnormality notification appears in the air conditioner list

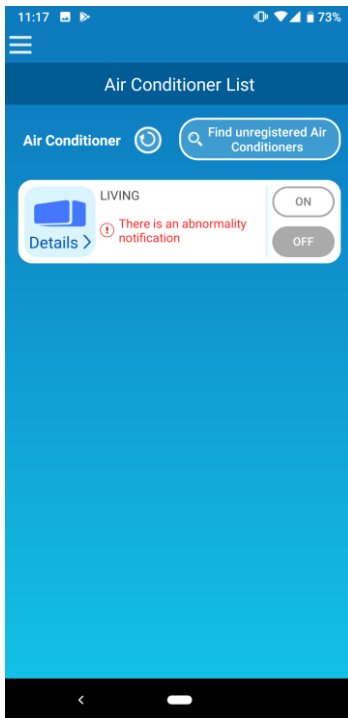


When an abnormality notification appears, air conditioner abnormality has been detected. Contact your dealer.

When “AC error notification” of the option settings is enabled, an e-mail is sent to the registered e-mail address.

Figure 15-5

- When you forget your password and cannot log in

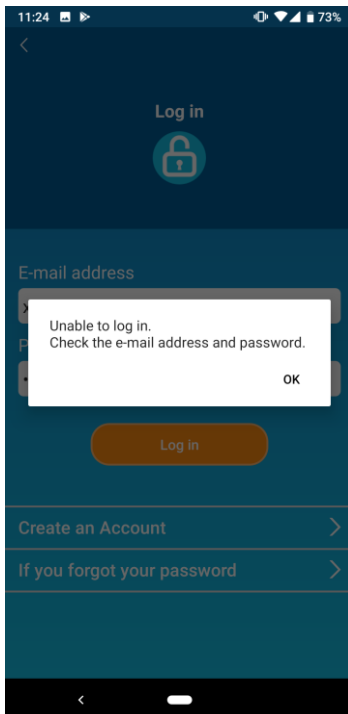

If you forgot your password and failed to log in, tap [OK] on the pop-up message, tap [If you forgot your password] to display the “Reset Password” screen, and set a new password.

→ To [“Reset Password”](#)

Figure 15-6

- When operation is performed by another account

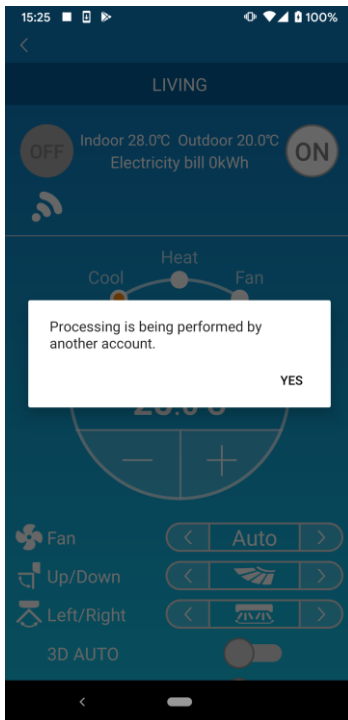


Figure 15-7

The message shows in the following cases:

- When the application is operated from other smartphones at the same time
- When the air conditioner is changing its operation status by its set control

The equipment is not malfunctioning, so please try again after a while.
(Approximately 1 minute)

- When "Shut-off reminder alert" does not turn on
(For Android OS)

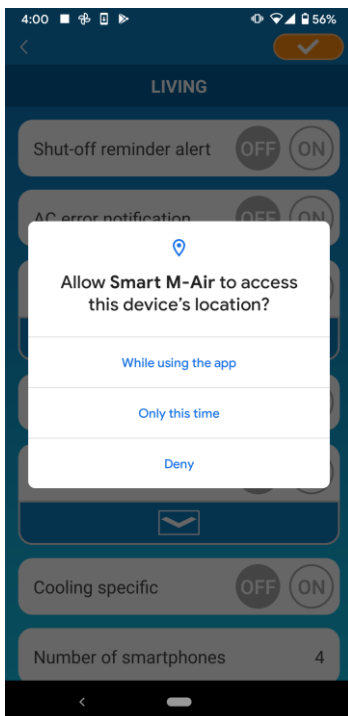


Figure 15-8

You must select "While using the app" when there is a request to allow access to your device information for this application.

If you accidentally tap other buttons such as "Only this time" or "Deny", you can change it to "While using the app" in Android OS Setting Screen.

mitsubishi Heavy Industries Thermal Systems, Ltd.

2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo, 100-8332, Japan
<https://www.mhi-mth.co.jp/en/>

Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd.

5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom
Tel : +44-333-207-4072
Fax: +44-333-207-4089
<https://www.mhiae.com/>

MHIAE Services B.V.

(Wholly-owned subsidiary of Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd.)
Herikerbergweg 238, Luna ArenA, 1101 CM Amsterdam, Netherlands
P.O.Box 23393 1100 DW Amsterdam, Netherlands
Tel : +31-20-406-4535
<http://www.mhiaeservices.com/>

Mitsubishi Heavy Industries Air-Conditioners Australia, Pty. Ltd.

Block E, 391 Park Road, Regents Park, NSW, 2143 PO BOX 3167, Regents Park, NSW, 2143
Tel : +61-2-8774-7500
Fax: +61-2-8774-7501
<https://www.mhiao.com.au>