


Operating Instructions Air Conditioner

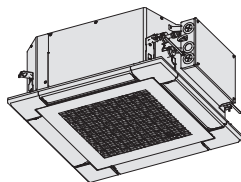

4-Way Cassette 60 × 60 (Type Y3)

Model No.

INDOOR UNIT

4-Way Cassette 60 × 60

(Type Y3)

S-M20PY3E

S-25PY3E

S-36PY3E

S-50PY3E

S-60PY3E

OUTDOOR UNIT

Single Split

See page 12.

RAC Multi

See page 20 (Supplement).



ENGLISH

Before operating the unit, read these operating instructions thoroughly and keep them for future reference.

Thank you for purchasing this Panasonic product.
This product is a commercial air conditioner indoor unit.
Installation Instructions attached.

Contents

● Safety Precautions.....	2
● Precautions for Use.....	5
● Names of Parts.....	6
● Maintenance.....	7
● Operation Mechanism.....	7
● nanoe™ X Function.....	8
● Troubleshooting.....	10
• Before Requesting Services.....	11
● Specifications.....	13
• Indoor unit.....	13
• Outdoor unit.....	14
● Supplement.....	20

	WARNING	This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	CAUTION	This symbol shows type of flammable refrigerant contained in the system.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Technical Manual.
	CAUTION	This symbol shows that there is information included in the Operating Instructions and/or Installation Instructions.

Product Information

If you have problems or questions concerning your Air Conditioner, you will need the following information. Model and serial numbers are on the nameplate.

Model No.

Serial No.

Date of purchase

Dealer's address

Phone number

Important Information Regarding The Refrigerant Used

NOTE

Refer to the Installation Instructions attached to the outdoor unit.

Safety Precautions

The following symbols used in this manual, alert you to potentially dangerous conditions to users, service personnel or the appliance:



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.



Prohibited matters



Matters to be observed

- Read these Operating Instructions carefully before using this air conditioner. If you still have any difficulties or problems, consult your dealer for help.
- This air conditioner is designed to give you comfortable room conditions. Use this only for its intended purpose as described in these Operating Instructions.



WARNING



Confirm to authorized dealer or specialist on usage of specified refrigerant type. Using of refrigerant other than the specified type may cause product damage, burst and injury, etc.

This air conditioner has no ventilator for intaking fresh air from outdoors. You must open doors or windows frequently when you use gas or oil heating appliances in the same room, which consume a lot of oxygen from the air.

Otherwise there is a risk of suffocation in an extreme case.



Never use or store gasoline or other flammable vapor or liquid near the air conditioner — it is very dangerous.

Do not use this appliance in a potentially explosive atmosphere.

Never touch the unit with wet hands.

Do not insert your fingers or other objects into the air conditioner indoor or outdoor unit, rotating parts may cause injury.



WARNING



If the refrigerant comes in contact with a flame, it produces toxic gases.

For safety, be sure to turn the air conditioner off and also to disconnect the power before cleaning or servicing.

Pull off the power plug from a receptacle, or switch off the breaker, or switch off the power disconnecting mean to isolate the air conditioner from the main power supply in case of emergency.



Dispose of according to national and/or local legislation.



This product must not be modified or disassembled under any circumstances.

Modified or disassembled unit may cause fire, electric shock or injury.

Do not clean inside the indoor and outdoor units by users. Engage authorized dealer or specialist for cleaning.

In case of malfunction of this appliance, do not repair by yourself. Contact the sales dealer or service dealer for a repair and disposal.



Provide a power outlet to be used exclusively for each unit, and a power supply disconnect, Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD) for overcurrent protection should be provided in the exclusive line.

Provide a power outlet exclusively for each unit, and full disconnection means having a contact separation in all poles must be incorporated in the fixed wiring in accordance with the wiring rules.

To prevent possible hazards from insulation failure, the unit must be grounded.



Do not use modified cord, joint cord, extension cord or unspecified cord to prevent overheating and fire.



The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

Be aware that refrigerants may not contain an odour.

An unventilated area where the appliance using flammable refrigerants is installed shall be so constructed that should any refrigerant leak, it will not stagnate so as to create a fire or explosion hazard.

The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.

After the unit is installed, never fail to ask the installer for the floor space of the room where the unit is installed and the refrigerant charge amount.

In case the unit or the room divider is changed, never fail to consult the sales dealer or service dealer.



Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

Do not pierce or burn.

In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.

WARNING



The appliance shall be stored in a room without continuously operating open flames (for example: an operating gas appliance) and ignition sources (for example: an operating electric heater).



Stop using the product when any abnormality/failure occurs and disconnect the power plug or turn off the power switch and breaker. (Risk of smoke/fire/electric shock)

Examples of abnormality/failure:

- The ELCB trips frequently.
- The product sometimes does not start when turned on.
- The power is sometimes disconnected when the cord is moved.
- Burnt odor or abnormal noise is detected during operation.
- The body is deformed or abnormally hot.
- Water leaks from the indoor unit.
- Power cord or plug becomes abnormally hot.
- Fan speed cannot be controlled.
- The unit stops running immediately even if it is switched on for operation.
- The fan does not stop even if the operation is stopped.

Contact immediately your local dealer for maintenance/repair.



Do not sit or step on the unit. You may fall down accidentally.



CAUTION



This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

<for European market only>

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Keep the fire alarm and the air outlet at least 1.5 m away from the unit.

Do not cool or heat the room too much if babies or invalids are present.



Do not turn the air conditioner on and off from the power mains switch. Use the ON/OFF operation button.

Do not stick anything into the air outlet of the outdoor unit. This is dangerous because the fan is rotating at high speed.



Do not touch the air inlet or the sharp aluminum fins of the outdoor unit. You may get injured.



Do not stick any object into the FAN CASE. You may be injured and the unit may be damaged.



NOTICE

- The appliance shall be stored so as to prevent mechanical damage from occurring.
- The compressor may occasionally stop during thunderstorms. This is not a mechanical failure. The unit automatically recovers after a few minutes.
- The English text is the original instructions. Other languages are translation of the original instructions.

Precautions for Use

Installation

- This air conditioner must be installed properly by qualified installation technicians in accordance with the Installation Instructions provided with the unit.
- Before installation, check that the voltage of the electric supply in your home or office is the same as the voltage shown on the nameplate.



WARNING

Avoid the following locations for installation.

- Locations where smoke or combustible gas exists.
Also locations of extremely high temperature such as a greenhouse.
- Locations where excessively high heat-generating objects are placed.

Attention:

- Avoid installing the outdoor unit where salty sea water can splash directly onto it or in sulphurous air near a spa.
(To protect the air conditioner from heavy corrosion)

Wiring

- All wiring must conform to the local electrical codes.
(Consult your dealer or a qualified electrician for details.)
- Each unit must be properly grounded with a ground (or earth) wire or through the supply wiring.
- Wiring must be done by a qualified electrician.

Operation Preparation

Turn the power mains on 5 hours before the start of operation.

(For warm-up)

- Leave the power mains ON for continuous use.

NOTE

Pull off the power plug from a receptacle, or switch off the breaker, or switch off the power disconnecting mean to isolate the air conditioner from the main power supply when not in use for a long time.

Tips for Energy Saving

■ Avoid

- **Do not block the air intake and outlet of the unit.**
(If either is obstructed, the unit will not function well, causing malfunction.)
- During cooling operation, use sunshades, blinds or curtains to prevent direct sunlight from entering the room.

■ Do

- Always keep the air filter clean.
(A clogged filter will impair the performance of the unit.)
→ "Maintenance" (P.7)
- To prevent conditioned air from escaping, keep windows, doors and any other openings closed.

Disposal of Old Equipment

Only for European Union and countries with recycling systems



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local municipality.


Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Names of Parts

INDOOR UNIT

Type Y3

Air intake grille
(air intake)

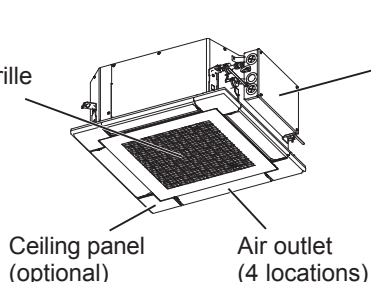

Label
(attached to the lid of electrical component box)

This air conditioner incorporates a biocidal product. Ionized air generated by a device incorporated in the air conditioner deactivates bacteria and viruses in the air, and on surfaces, and inhibits mould growth on surfaces.
Active substances: free radicals generated in situ from ambient air or water



OUTDOOR UNIT

When connecting RAC Multi outdoor unit, see Section "Supplement" as well.

PZ3 (Type 25, 36, 50)




PZ3 (Type 60)



PZH4 (Type 71, 100, 125, 140)

PZ3 (Type 100, 125)

PZ2 (Type 100)

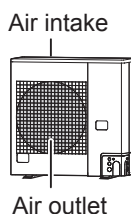


PZH3 (Type 36, 50, 60)

PZH2 (Type 36, 50)




PZH3 (Type 71)

PZH2 (Type 71)

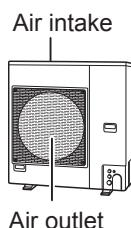

PZH3 (Type 100, 125, 140)

PZH2 (Type 100, 125, 140)

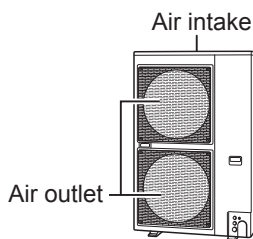

Optional

Wireless Remote Controller



Model No. CZ-RWS3
The receiver : Model No. CZ-RWRY3 (Type Y3)
CZ-RWRC3
(For all indoor units)

(Infrared Remote Controller)

Timer Remote Controller




Model No. CZ-RTC4
For all indoor units

High-spec Wired Remote Controller



Model No. CZ-RTC5B
For all indoor units

Wired Remote Controller

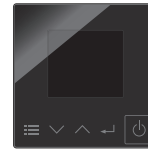

Model No. CZ-RTC6 series
For all indoor units

Read the Operating Instructions included with the Remote Controller.

■ Operation & Adjusting Airflow Direction

Refer to the Operating Instructions attached to the Remote Controller.

* The flap display on the remote controller differs from the actual flap angle.

* To protect the ceiling from smudges or stains, set the airflow direction on the remote controller as shown below.



Maintenance


⚠ WARNING

- For safety, be sure to turn the air conditioner off and disconnect the power before cleaning. (Otherwise, electric shock or injury may result because the fan is rotating at high speed.)
- Do not pour water on the indoor unit. (This may damage the internal components and cause an electric shock hazard.)

⚠ CAUTION

- Never use solvents or harsh chemicals. Also, do not wipe plastic parts using very hot water. (This may cause deformation or change in colour.)
- Some metal edges and fins are sharp. Be careful when you clean those parts. (Injury may result.)
- Use a firm stool or ladder when cleaning an indoor unit installed in high locations.

■ Indoor unit (e.g., Type Y3)

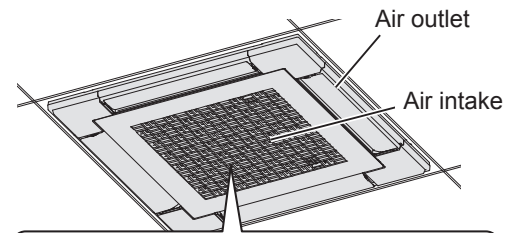

Wipe with a soft cloth.
(If it is very dirty, use a cloth moistened with lukewarm water.)

■ Outdoor unit


The internal coil and other components of the outdoor unit must be cleaned periodically.

- Consult your dealer or service center.


■ Air Filter Maintenance

Consult your dealer or service center when the  (Filter) appears on the display of the wired remote controller.


Timer Remote Controller

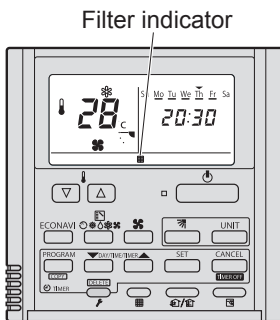

High-spec Wired Remote Controller

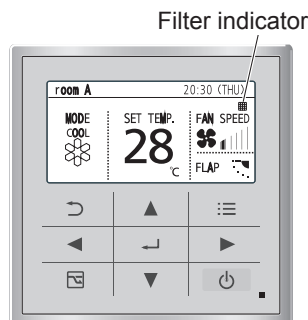

Wired Remote Controller

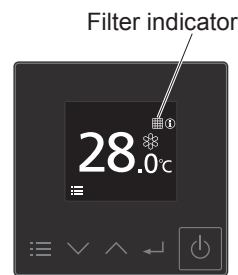

Operation Mechanism

■ Heating performance

- This air conditioner utilizes outside air for heating; its heating performance reduces as outside temperature decreases.
- In the event that heating is not sufficient, please use an additional heating appliance.

■ Defrosting

- This appliance may start defrosting operation to melt frost formed in the outdoor unit.
 - ① **Defrosting starts:** The indoor unit fan stops (or the speed becomes extremely slow).
→ "STANDBY" appears.
 - ② **Heating operation resumes after several minutes:** The indoor unit fan remains stopped (or it will run at a very slow speed) until the indoor heat exchanger coil warms up sufficiently.
→ "STANDBY" appears.
 - ③ **Defrosting is complete:** The indoor unit fan starts operation.
→ "STANDBY" disappears.

■ "DRY" operation

- Once the room temperature reaches the level that was set, the outdoor unit repeats the cycle of turning on and off automatically.
- When the room temperature is more likely to reach the level that was set, the fan speed is set to "breeze" (light wind) automatically.


■ Should power failure occur while the unit is running

The unit will resume operation automatically. Operation settings prior to power failure will be used.

nanoe™ X Function

Display during operation of nanoe™ X

Example: Initial screen of remote controller

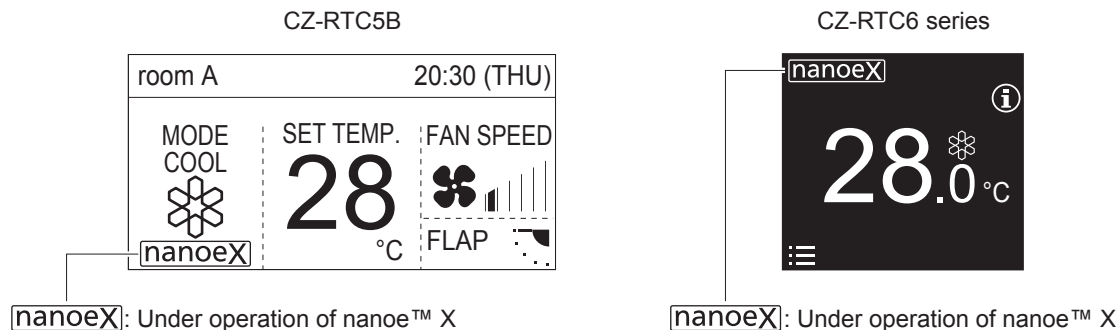

nanoe™ X For a freshness and cleaner environment

nanoe™ X generates negative ions using the air in the room to give a healthy air.

It also reduces the smell in the room, and constrains propagations of mold and bacteria.

When purchased, the nanoe™ X function is designed to automatically operate.


- If you wish to set to OFF, refer to the operating instructions for the remote controller adaptable to nanoe™ X function.



Internal Cleaning Function

Internal Cleaning Operation

When cooling or dry operation stopped, internal drying and nanoe™ X circulation airflow is activated in order to suppress the mold proliferation inside the unit (airflow passage, fan, heat exchanger). According to the installation environment or operating hours, mold proliferation or inhibition of mold growth will be changed.

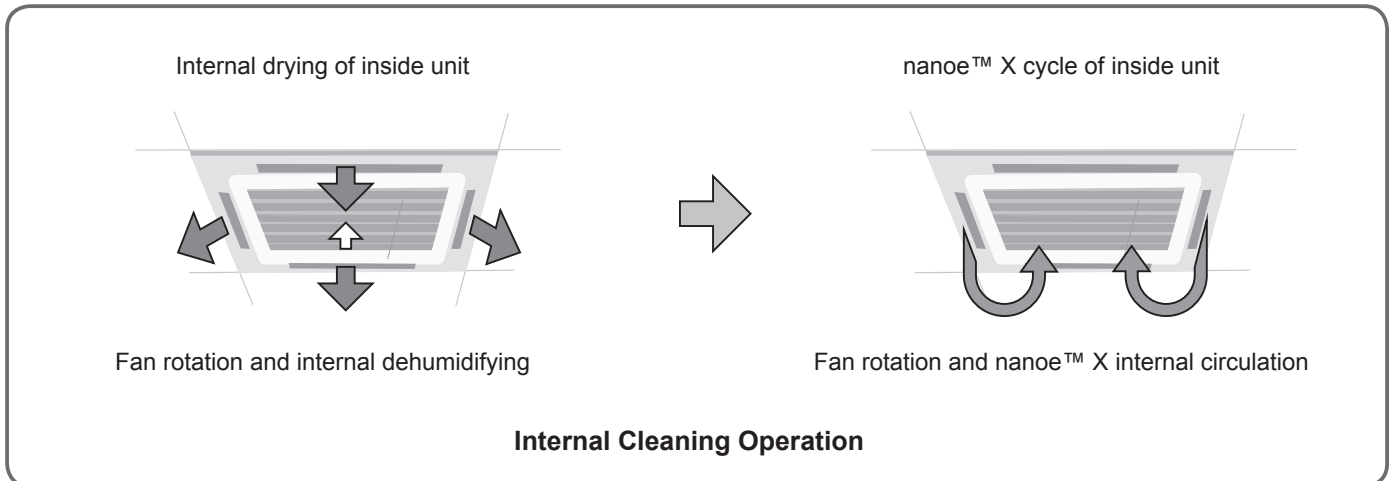


- Operating conditions and operating hours
Operates in cooling or dry mode for more than 5 minutes.
When finished, the internal cleaning operation is started.
Drives for about Max 75 minutes.
 - The figure at right shows the display during the internal cleaning operation.
 - If you wish to resume operating during internal cleaning, press / .
 - To stop the internal cleaning operation
Press / .
- When the internal cleaning operation finished and stopped, the remote control display shows at right.

CZ-RTC5B

room A	20:30 (THU)
Cleaning the inside of air conditioner with nanoeX. Press [←] to finish.	
[⏻] START	

room A	20:30 (THU)
[⏻] START	

CZ-RTC6 series

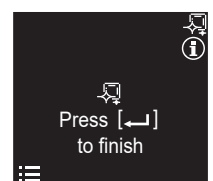

NOTES:

- Internal cleaning function is not possible to use any remote controller other than that of nanoe™ X function.
- When connected to the remote controller which is adaptable to the nanoe™ X function, the internal cleaning function is set to work automatically. If you wish to set to OFF, refer to the operating instructions for the remote controller which is adaptable to the nanoe™ X function. If you wish to set the internal cleaning function to OFF with CZ-RTC6 series remote controller, use Panasonic H & C Control App. This app is compatible with the following remote controllers.
Check the model number shown in the label on the bottom of the remote controllers.
Models : CZ-RTC6BL / CZ-RTC6BLW (CZ-RTC6 incompatible)
- In case that the operation time of the air conditioner is less than 5 minutes, the internal cleaning operation cannot be performed.
- While the internal cleaning operation is running, the indoor temperature may occasionally increase.

Troubleshooting

Check before consulting or requesting services.

Symptom		Cause / Action	
Indoor unit	Noise	Sound like streaming water is heard during operation or after operation.	• Sound of refrigerant liquid flowing inside unit • Sound of drainage water through drain pipe
		Cracking noise is heard during operation or when operation stops.	• Sound due to temperature changes of parts
	Discharged air smells during operation.		• Indoor odor components, cigarette odor and cosmetic odor accumulated in the air conditioner and its air is discharged. • The unit inside is dirty. (Contact your dealer.)
	Dewdrops accumulate near the air outlet during cooling operation.		• Internal moisture is cooled by cool wind and accumulates as dewdrops.
	Fog occurs during cooling operation.		• If the air conditioner has been installed at places such as restaurants where large amounts of oil mist exist, cleaning is necessary because the unit inside (heat exchanger) is dirty. (Contact your dealer.)
	Fog occurs during heating operation.		• Defrost operation is in process.
	The fan is rotating for a while even though operation stops.		• Fan rotation makes operation smooth. • The fan may rotate to dry the heat exchanger depending on the setting. • Fan may sometimes rotate in internal cleaning operation mode for a while.
	Airflow direction	Airflow direction changes while operating. Airflow direction cannot be set. Airflow direction cannot be changed.	• When air discharge temperature is low during heating operation, or during defrost operation, horizontal wind flow is made automatically.
	Dust is discharged.		• Dust accumulated inside the indoor unit is discharged.
	Humming noise comes out.		• This is the sound of nanoe™ X being discharged.
	nanoeX is not displayed on the remote controller.		• Has nanoe™ X been set to OFF? → Set to ON.
	⚠ nanoeX is displayed on the remote controller.		• nanoe™ X is considered abnormal. (Contact your dealer.)
Outdoor unit	No operation (When the power is turned on immediately / When operation is stopped and resumed immediately)		• Operation is not activated for the first approx. 3 minutes because the compressor protection circuit is activated.
	Noise occurs during heating operation.		• Defrost operation is in process.
	Steam comes out during heating operation.		
	The fan continues to rotate even after the operation is stopped using the remote controller.		• This is for smooth operation.

Before Requesting Services

Symptom	Cause	Action
The air conditioner does not operate although the power is turned on.	Power failure or after power failure	Press the power ON/OFF button on the remote controller.
	The operation (power) button is turned off.	• If the breaker is turned off, turn the power on. • If the breaker has been tripped, consult your dealer without turning it on.
	Fuse blow out.	Contact your dealer.
Poor cooling or heating performance	The air intake or air outlet of indoor and outdoor units is clogged with dust.	Remove the dust.
	The fan speed switch is set to "Low".*	Change to "Medium" or "High".*
	Improper temperature settings	See "Tips for Energy Saving". (P.5)
	The room is exposed to direct sunlight in cooling mode.	
	Doors or windows are open.	
	The air filter is clogged.	See "Maintenance". (P.7)
	Too many heat sources in the room in cooling mode.	Use minimum heat sources and in a short time.
	Too many people in the room in cooling mode.	Lower the temperature setting or change to "Medium" or "High".*

* Regarding the fan speed control display on the remote controller, see page 13.

If your air conditioner does not work properly even after checking each item of "Before Requesting Services" and "Troubleshooting"

- Stop the operation immediately and turn the power off. Then contact your dealer and report the serial number and symptom. You also report if the inspection mark  and the letters E, F, H, L, P in combination with numbers appear on the LCD of the remote controller.
- Never repair the air conditioner by yourself since it is very dangerous for you to do so.

Connectable outdoor unit lineup

When connecting RAC Multi outdoor unit, see Section “Supplement” as well.

Europe

■ Refrigerant type : R32

Outdoor unit type		36	45	50	60
PZH2	1-phase	U-36PZH2E5	—	U-50PZH2E5	—
	3-phase	—	—	—	—
PZ2	1-phase	—	—	—	—
	3-phase	—	—	—	—

Outdoor unit type		71	100	125	140
PZH2	1-phase	U-71PZH2E5	U-100PZH2E5	U-125PZH2E5	U-140PZH2E5
	3-phase	U-71PZH2E8	U-100PZH2E8	U-125PZH2E8	U-140PZH2E8
PZ2	1-phase	—	U-100PZ2E5	—	—
	3-phase	—	U-100PZ2E8	—	—

Outdoor unit type		25	36	50	60
PZH3	1-phase	—	U-36PZH3E5	U-50PZH3E5	U-60PZH3E5
	3-phase	—	—	—	—
PZ3	1-phase	U-25PZ3E5	U-36PZ3E5	U-50PZ3E5	U-60PZ3E5A
	3-phase	—	—	—	—

Outdoor unit type		71	100	125	140
PZH3	1-phase	U-71PZH3E5	U-100PZH3E5	U-125PZH3E5	U-140PZH3E5
	3-phase	U-71PZH3E8	U-100PZH3E8	U-125PZH3E8	U-140PZH3E8
PZ3	1-phase	—	U-100PZ3E5	U-125PZ3E5	—
	3-phase	—	U-100PZ3E8	U-125PZ3E8	—

Outdoor unit type		71	100	125	140
PZH4	1-phase	U-71PZH4E5	U-100PZH4E5	U-125PZH4E5	U-140PZH4E5
	3-phase	U-71PZH4E8	U-100PZH4E8	U-125PZH4E8	U-140PZH4E8

Oceania

■ Refrigerant type : R32

Outdoor unit type		25	36	50	60
PZ3	1-phase	U-25PZ3R5	U-36PZ3R5	U-50PZ3R5	U-60PZ3R5
	3-phase	—	—	—	—

Specifications

When connecting RAC Multi outdoor unit, see Section “Supplement” as well.

Indoor unit

4-Way Cassette 60 × 60 (Type Y3)

Model Name			S-25PY3E	S-36PY3E	S-50PY3E	S-60PY3E
Power source (Europe)			220 - 230 - 240 V～ 50 Hz			
Power source (Oceania)			230 - 240 V～ 50 Hz			
Cooling capacity		kW	2.5	3.6	5.0	6.0
		BTU/h	8,500	12,300	17,100	20,500
	Sensible	kW	2.0	2.8	3.5	4.2
	Latent	kW	0.5	0.8	1.5	1.8
Heating capacity		kW	3.2	3.6	5.0	6.0
		BTU/h	10,900	12,300	17,100	20,500
Cooling electric power input*		kW	—	0.021	0.034	0.048
Heating electric power input*		kW	—	0.019	0.032	0.046
Sound pressure level***	High	dB(A)	31	34	39	43
	Medium	dB(A)	28	30	34	37
	Low	dB(A)	25	25	27	31
Sound power level***	High	dB(A)	46	49	54	58
	Medium	dB(A)	43	45	49	52
	Low	dB(A)	40	40	42	46
Unit dimensions (H×W×D) **		mm	273×625×625	273×625×625	273×625×625	273×625×625
Net weight **		kg	17.8	17.8	17.8	17.8

Operation condition temperature range



• Cooling mode : 18°C~32°C DB • Heating mode : 16°C~30°C DB

Specifications when connected to the outdoor PZ3 series

* In the case of nanoe™ X “OFF”

** Values include the dimensions and weight of an optional ceiling panel.

*** Fan speed display on the remote controller

High	:		(CZ-RTC4),		(CZ-RTC5B, CZ-RTC6 series)
Medium	:		(CZ-RTC4),		(CZ-RTC5B, CZ-RTC6 series)
Low	:		(CZ-RTC4),		(CZ-RTC5B, CZ-RTC6 series)

Specifications

When connecting RAC Multi outdoor unit, see Section “Supplement” as well.

Outdoor unit

Single Split Outdoor Unit (R32)

Europe	Model Name	U-36PZH2E5	U-50PZH2E5
	Power source	220 - 230 - 240 V~ 50 Hz	
Cooling capacity	kW	3.6	5.0
	BTU/h	12,300	17,100
Heating capacity	kW	4.0	5.6
	BTU/h	13,600	19,100
Sound pressure level (Cooling / Heating)	dB(A)	43 / 44	45 / 48
Sound power level (Cooling / Heating)	dB(A)	62 / 64	64 / 68
Unit dimensions (H×W×D)	mm	695×875×320	695×875×320
Net weight	kg	43	43

Operation condition temperature range

• Cooling mode : -15°C~46°C DB • Heating mode : -20°C~24°C DB

Europe	Model Name	U-71PZH2E5	U-100PZH2E5	U-125PZH2E5	U-140PZH2E5
	Power source	220 - 230 - 240 V~ 50 Hz			
Cooling capacity	kW	7.1	10.0	12.5	14.0
	BTU/h	24,200	34,100	42,700	47,800
Heating capacity	kW	8.0	11.2	14.0	16.0
	BTU/h	27,300	38,200	47,800	54,600
Sound pressure level (Cooling / Heating)	dB(A)	48 / 50	52 / 52	53 / 53	54 / 54
Sound power level (Cooling / Heating)	dB(A)	65 / 67	69 / 69	70 / 70	71 / 71
Unit dimensions (H×W×D)	mm	996×940×340	1,416×940×340	1,416×940×340	1,416×940×340
Net weight	kg	68	99	99	99

Europe	Model Name	U-71PZH2E8	U-100PZH2E8	U-125PZH2E8	U-140PZH2E8
	Power source	380 - 400 - 415 V 3N~ 50 Hz			
Cooling capacity	kW	7.1	10.0	12.5	14.0
	BTU/h	24,200	34,100	42,700	47,800
Heating capacity	kW	8.0	11.2	14.0	16.0
	BTU/h	27,300	38,200	47,800	54,600
Sound pressure level (Cooling / Heating)	dB(A)	48 / 50	52 / 52	53 / 53	54 / 54
Sound power level (Cooling / Heating)	dB(A)	65 / 67	69 / 69	70 / 70	71 / 71
Unit dimensions (H×W×D)	mm	996×940×340	1,416×940×340	1,416×940×340	1,416×940×340
Net weight	kg	68	99	99	99

Operation condition temperature range

• Cooling mode : -15°C~46°C DB (Type 71, 200, 250)

: -15°C (-20°C)* ~46°C DB (Type 100, 125, 140)

* It is possible to operate at -20°C only in the computer rooms with the piping length of 30 m or less.

• Heating mode : -20°C~24°C DB

Rated conditions

Cooling : Indoor intake air temp. 27°C DB / 19°C WB. Outdoor intake air temp. 35°C DB.

Heating : Indoor intake air temp. 20°C DB. Outdoor intake air temp. 7°C DB / 6°C WB.

Europe	Model Name		U-100PZ2E5	U-100PZ2E8
	Power source		220 - 230 - 240 V~ 50 Hz	380 - 400 - 415 V 3N~ 50 Hz
Cooling capacity	kW		10.0	10.0
	BTU/h		34,100	34,100
Heating capacity	kW		10.0	10.0
	BTU/h		34,100	34,100
Sound pressure level (Cooling / Heating)	dB(A)		52 / 52	52 / 52
Sound power level (Cooling / Heating)	dB(A)		70 / 70	70 / 70
Unit dimensions (H×W×D)	mm		996×980×370	996×980×370
Net weight	kg		90	90

Operation condition temperature range

• Cooling mode : -10°C~43°C DB • Heating mode : -15°C~24°C DB

Rated conditions

Cooling : Indoor intake air temp. 27°C DB / 19°C WB. Outdoor intake air temp. 35°C DB.

Heating : Indoor intake air temp. 20°C DB. Outdoor intake air temp. 7°C DB / 6°C WB.

Specifications

When connecting RAC Multi outdoor unit, see Section “Supplement” as well.

Outdoor unit

Single Split Outdoor Unit (R32)

Europe	Model Name	U-36PZH3E5	U-50PZH3E5	U-60PZH3E5
	Power source	220 - 230 - 240 V~ 50 Hz		
Cooling capacity	kW	3.6	5.0	6.0
	BTU/h	12,300	17,100	20,500
Heating capacity	kW	4.0	5.6	7.0
	BTU/h	13,600	19,100	23,900
Sound pressure level (Cooling / Heating)	dB(A)	43 / 44	46 / 48	47 / 50
Sound power level (Cooling / Heating)	dB(A)	62 / 64	64 / 67	65 / 69
Unit dimensions (H×W×D)	mm	695×875×320	695×875×320	695×875×320
Net weight	kg	42	42	43

Operation condition temperature range

• Cooling mode : -15°C~46°C DB • Heating mode : -20°C~24°C DB

Europe	Model Name	U-71PZH3E5	U-100PZH3E5	U-125PZH3E5	U-140PZH3E5
	Power source	220 - 230 - 240 V~ 50 Hz			
Cooling capacity	kW	7.1	10.0	12.5	14.0
	BTU/h	24,200	34,100	42,700	47,800
Heating capacity	kW	8.0	11.2	14.0	16.0
	BTU/h	27,300	38,200	47,800	54,600
Sound pressure level (Cooling / Heating)	dB(A)	48 / 50	52 / 52	53 / 53	54 / 54
Sound power level (Cooling / Heating)	dB(A)	65 / 67	69 / 69	70 / 70	71 / 71
Unit dimensions (H×W×D)	mm	996×940×340	1,416×940×340	1,416×940×340	1,416×940×340
Net weight	kg	65	98	98	98

Europe	Model Name	U-71PZH3E8	U-100PZH3E8	U-125PZH3E8	U-140PZH3E8
	Power source	380 - 400 - 415 V 3N~ 50 Hz			
Cooling capacity	kW	7.1	10.0	12.5	14.0
	BTU/h	24,200	34,100	42,700	47,800
Heating capacity	kW	8.0	11.2	14.0	16.0
	BTU/h	27,300	38,200	47,800	54,600
Sound pressure level (Cooling / Heating)	dB(A)	48 / 50	52 / 52	53 / 53	54 / 54
Sound power level (Cooling / Heating)	dB(A)	65 / 67	69 / 69	70 / 70	71 / 71
Unit dimensions (H×W×D)	mm	996×940×340	1,416×940×340	1,416×940×340	1,416×940×340
Net weight	kg	65	98	98	98

Operation condition temperature range

• Cooling mode : -15°C~48°C DB • Heating mode : -20°C~24°C DB

Rated conditions

Cooling : Indoor intake air temp. 27°C DB / 19°C WB. Outdoor intake air temp. 35°C DB.

Heating : Indoor intake air temp. 20°C DB. Outdoor intake air temp. 7°C DB / 6°C WB.

Europe	Model Name		U-25PZ3E5	U-36PZ3E5	U-50PZ3E5	U-60PZ3E5A
	Power source		220 - 230 - 240 V~ 50 Hz			
Cooling capacity	kW		2.5	3.6	5.0	6.0
	BTU/h		8,500	12,300	17,100	20,500
Heating capacity	kW		3.2	3.6	5.0	6.0
	BTU/h		10,900	12,300	17,100	20,500
Sound pressure level (Cooling / Heating)	dB(A)		46 / 47	46 / 47	46 / 46	47 / 48
Sound power level (Cooling / Heating)	dB(A)		64 / 66	64 / 66	64 / 64	64 / 65
Unit dimensions (H×W×D)	mm		619×824×299	619×824×299	619×824×299	695×875×320
Net weight	kg		32	32	35	42

Operation condition temperature range

• Cooling mode : -10°C~43°C DB • Heating mode : -15°C~24°C DB

Europe	Model Name		U-100PZ3E5	U-125PZ3E5	U-100PZ3E8	U-125PZ3E8
	Power source		220 - 230 - 240 V~ 50 Hz		380 - 400 - 415 V 3N~ 50 Hz	
Cooling capacity	kW		10.0	12.5	10.0	12.5
	BTU/h		34,100	42,700	34,100	42,700
Heating capacity	kW		10.0	12.5	10.0	12.5
	BTU/h		34,100	42,700	34,100	42,700
Sound pressure level (Cooling / Heating)	dB(A)		52 / 52	55 / 55	52 / 52	55 / 55
Sound power level (Cooling / Heating)	dB(A)		70 / 70	73 / 73	70 / 70	73 / 73
Unit dimensions (H×W×D)	mm		996×980×370	996×980×370	996×980×370	996×980×370
Net weight	kg		83	87	83	87

Operation condition temperature range

• Cooling mode : -10°C~43°C DB • Heating mode : -15°C~24°C DB

Rated conditions

Cooling : Indoor intake air temp. 27°C DB / 19°C WB. Outdoor intake air temp. 35°C DB.

Heating : Indoor intake air temp. 20°C DB. Outdoor intake air temp. 7°C DB / 6°C WB.

Specifications

When connecting RAC Multi outdoor unit, see Section “Supplement” as well.

Outdoor unit

Single Split Outdoor Unit (R32)

Europe	Model Name	U-71PZH4E5	U-100PZH4E5	U-125PZH4E5	U-140PZH4E5
	Power source	220 - 230 - 240 V~ 50 Hz			
Cooling capacity	kW	7.1	9.5	12.5	13.4
	BTU/h	24,200	32,400	42,700	45,700
Heating capacity	kW	8.0	11.2	14.0	16.0
	BTU/h	27,300	38,200	47,800	54,600
Sound pressure level (Cooling / Heating)	dB(A)	48 / 50	52 / 52	55 / 55	56 / 56
Sound power level (Cooling / Heating)	dB(A)	65 / 67	69 / 69	73 / 73	74 / 74
Unit dimensions (H×W×D)	mm	996×980×370	996×980×370	996×980×370	996×980×370
Net weight	kg	66	84	86	86

Europe	Model Name	U-71PZH4E8	U-100PZH4E8	U-125PZH4E8	U-140PZH4E8
	Power source	380 - 400 - 415 V 3N~ 50 Hz			
Cooling capacity	kW	7.1	9.5	12.5	13.4
	BTU/h	24,200	32,400	42,700	45,700
Heating capacity	kW	8.0	11.2	14.0	16.0
	BTU/h	27,300	38,200	47,800	54,600
Sound pressure level (Cooling / Heating)	dB(A)	48 / 50	52 / 52	55 / 55	56 / 56
Sound power level (Cooling / Heating)	dB(A)	65 / 67	69 / 69	73 / 73	74 / 74
Unit dimensions (H×W×D)	mm	996×980×370	996×980×370	996×980×370	996×980×370
Net weight	kg	66	82	84	84

Operation condition temperature range

• Cooling mode : -15°C~52°C DB • Heating mode : -20°C~24°C DB

Rated conditions

Cooling : Indoor intake air temp. 27°C DB / 19°C WB. Outdoor intake air temp. 35°C DB.

Heating : Indoor intake air temp. 20°C DB. Outdoor intake air temp. 7°C DB / 6°C WB.

Oceania	Model Name		U-25PZ3R5	U-36PZ3R5	U-50PZ3R5	U-60PZ3R5
	Power source		230 - 240 V~ 50 Hz			
Cooling capacity	kW		2.5	3.6	5.0	6.0
	BTU/h		8,500	12,300	17,100	20,500
Heating capacity	kW		3.2	3.6	5.0	6.0
	BTU/h		10,900	12,300	17,100	20,500
Sound pressure level (Cooling / Heating)	dB(A)		48 / 49	48 / 49	48 / 49	48 / 49
Sound power level (Cooling / Heating)	dB(A)		66 / 67	66 / 67	66 / 67	66 / 67
Unit dimensions (H×W×D)	mm		619×824×299	619×824×299	619×824×299	695×875×320
Net weight	kg		31	31	35	43

Operation condition temperature range

• Cooling mode : -10°C~43°C DB • Heating mode : -15°C~24°C DB

Rated conditions

Cooling : Indoor intake air temp. 27°C DB / 19°C WB. Outdoor intake air temp. 35°C DB.

Heating : Indoor intake air temp. 20°C DB. Outdoor intake air temp. 7°C DB / 6°C WB.

Supplement


When connecting RAC Multi outdoor unit (Refrigerant type : R32), see the follow section as well.

■ Names of Parts

RAC MULTI OUTDOOR UNIT

2 ROOM MULTI

(Type 35, 41, 50)

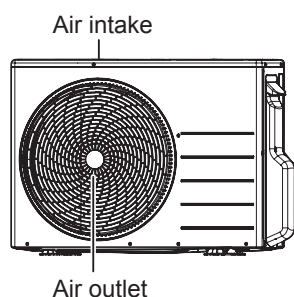


3 ROOM MULTI

(Type 52, 68)

4 ROOM MULTI

(Type 68)

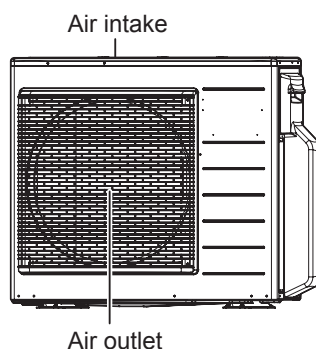


4 ROOM MULTI

(Type 80)

5 ROOM MULTI

(Type 90)

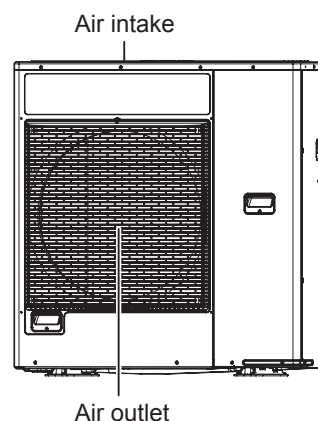

■ Connectable RAC Multi outdoor unit lineup

Europe

Multi Outdoor unit type		35	41	50
2 Room Multi	1-phase	CU-2Z35TBE	CU-2Z41TBE	CU-2Z50TBE
Multi Outdoor unit type		52	68	
3 Room Multi	1-phase	CU-3Z52TBE	CU-3Z68TBE	
Multi Outdoor unit type		68	80	
4 Room Multi	1-phase	CU-4Z68TBE	CU-4Z80TBE	
Multi Outdoor unit type		90		
5 Room Multi	1-phase	CU-5Z90TBE		

Oceania

Multi Outdoor unit type		52	
2 Room Multi	1-phase	CU-2Z52VBR	
Multi Outdoor unit type		54	
3 Room Multi	1-phase	CU-3Z54VBR	
Multi Outdoor unit type		71	80
4 Room Multi	1-phase	CU-4Z71VBR	CU-4Z80VBR
Multi Outdoor unit type		100	
5 Room Multi	1-phase	CU-5Z100VBR	

Supplement

■ Specifications

Multi Split Indoor Unit

Model				S-M20PY3E	S-25PY3E	S-36PY3E	S-50PY3E	S-60PY3E
(Capacity)				(2.0 kW class)	(2.5 kW class)	(3.5 kW class)	(5.0 kW class)	(6.0 kW class)
Power Source				Single phase, 230 V, 50 Hz				
Noise Level	Sound pressure level (acc. to JIS C 9612 [<70 dB(A)]); Conditions: 1 m distance in standard heating mode	dB(A)	COOL HEAT	33 33	33 33	36 36	41 41	45 45
	Sound Power Level	dB(A)	COOL HEAT	48 48	48 48	51 51	56 56	60 60
Dimensions	Height	mm		243	243	243	243	243
	Width	mm		575	575	575	575	575
	Depth	mm		575	575	575	575	575
Product Weight		kg		15	15	15	15	15

- For complete product specification, please refer to catalog.
- Standby power consumption ≤ 12.0 W (when switched OFF by remote control, except under self-protection control).

Supplement

■ Specifications

Multi Split Outdoor Unit

Model				CU-2Z35TBE	CU-2Z41TBE	CU-2Z50TBE	CU-3Z52TBE
Standard Indoor Unit Combination (wall mounted) (Capacity)				(1.6 kW + 2.0 kW)	(1.6 kW + 2.5 kW)	(2.5 kW + 2.5 kW)	(1.6 kW + 1.6 kW + 2.0 kW)
Power Source				Single phase, 230 V, 50 Hz			
Cooling capacity		kW		3.50 (1.50 - 4.50)	4.10 (1.50 - 5.20)	5.00 (1.50 - 5.40)	5.20 (1.80 - 7.30)
Heating capacity		kW		4.20 (1.10 - 5.60)	4.60 (1.10 - 7.00)	5.60 (1.10 - 7.20)	6.80 (1.60 - 8.30)
Noise Level	Sound pressure level (acc. to JIS C 9612 [<70 dB(A)]); Conditions: 1 m distance in standard heating mode	dB(A)	COOL HEAT	48 50	48 50	50 52	47 48
	Sound Power Level	dB(A)	COOL HEAT	63 65	63 65	65 67	61 62
Dimensions	Height	mm		619	619	619	795
	Width	mm		824 (+70)	824 (+70)	824 (+70)	875 (+95)
	Depth	mm		299	299	299	320
Product Weight		kg		39	39	39	71

Model				CU-3Z68TBE	CU-4Z68TBE	CU-4Z80TBE	CU-5Z90TBE
Standard Indoor Unit Combination (wall mounted) (Capacity)				(1.6 kW + 2.0 kW + 3.5 kW)	(1.6 kW + 1.6 kW + 1.6 kW + 2.0 kW)	(2.0 kW + 2.0 kW + 2.0 kW + 2.0 kW)	(1.6 kW + 1.6 kW + 1.6 kW + 1.6 kW + 2.5 kW)
Power Source				Single phase, 230 V, 50 Hz			
Cooling capacity		kW		6.80 (1.90 - 8.00)	6.80 (1.90 - 8.80)	8.00 (3.00 - 9.20)	9.00 (2.90 - 11.50)
Heating capacity		kW		8.50 (3.30 - 10.40)	8.50 (3.00 - 10.60)	9.40 (4.20 - 10.60)	10.40 (3.40 - 14.50)
Noise Level	Sound pressure level (acc. to JIS C 9612 [<70 dB(A)]); Conditions: 1 m distance in standard heating mode	dB(A)	COOL HEAT	51 52	49 50	51 52	53 54
	Sound Power Level	dB(A)	COOL HEAT	65 66	63 64	67 68	69 70
Dimensions	Height	mm		795	795	999	999
	Width	mm		875 (+95)	875 (+95)	940	940
	Depth	mm		320	320	340	340
Product Weight		kg		71	72	80	81

- For complete product specification, please refer to catalog.
- Standby power consumption ≤ 12.0 W (when switched OFF by remote control, except under self-protection control).

Contact in the UK
Panasonic UK,
a branch of Panasonic Marketing Europe GmbH,
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

Panasonic Corporation
<http://www.panasonic.com>

© Panasonic Corporation 2021 - 2023

Authorised representative in EU
Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

WEB-ACXF55-28600-EN
DC0721-10323